




 


 





 







 



 




 






Original	Substitut
Standby	Power
AQT/Auto/Open/CI	Eject / Surround
P.Mode	Picture / Format
S.Mode	Sound / Title
List/Angle	Smart / List
Aspect	Setup / OPT /
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Recall	Back / Return

Original	Substitut
Vol+	Vol+
Vol-	Vol-
Mute	Mute / Dimmer
Audio	Audio / Lang I/II
Sub-T	Subtitle / EQ
CH+	CH+ / Page+
CH-	CH- / Page-
Menu	Menu / Home
Info	Info / Angle
Input	AV / Input / RDS
DVD Setup/Exit	Exit / Cancel / Clear
Sleep	Sleep / Timer
Up	Up
Down	Down
Right	Right
Left	Left
OK	OK






















 



























 











 




Original	Substitut
 Rec	 Rec / Rec Mode
 Red/D.Prog/Tv/	 Red / Netflix / Search
 Green/Step	 Green / APP / Repeat
 Yellow/RPT	 Yellow / YouTube / Repeat
 Blue/A-B/SCR	 Blue / Prime Video / Random
 [=]/Slow	 Text / Goto
 [=▲]/Stop	 Stop / Hold
 [=▼]/Zoom	 Zoom / Size
 [=i]/I<<	 I<< / Preset-
 [=+] / Play/Pause	 Play / Slow
 [=◊]/>>I	 >>I / Preset+
 [=?]/<<<	 <<< / Tune-
 [=o]/>>>	 >>> / Tune+
 EPG/D.Menu	 Guide / EPG / -/--
 FAV/D.Title	 Fav / Marker / PC
 FAV+/D.Goto	 Shift + CH+ /
 FAV-/D.Disp	 Shift + CH- /





















Page-

Original	Substitut





Original	Substitut	Original	Substitut
 Standby	 Power	 Vol+	 Vol+
 AQT/Auto/Open/CI	 Eject / Surround	 Vol-	 Vol-
 P.Mode	 Picture / Format	 Mute	 Mute / Dimmer
 S.Mode	 Sound / Title	 Audio	 Audio / Lang I/II
 List/Angle	 Smart / List	 Sub-T	 Subtitle / EQ
 Aspect	 Setup / OPT /	 CH+	 CH+ / Page+
 1	 1	 CH-	 CH- / Page-
 2	 2	 Menu	 Menu / Home
 3	 3	 Info	 Info / Angle
 4	 4	 Input	 AV / Input / RDS
 5	 5	 DVD Setup/Exit	 Exit / Cancel / Clear
 6	 6	 Sleep	 Sleep / Timer
 7	 7	 Up	 Up
 8	 8	 Down	 Down
 9	 9	 Right	 Right
 0	 0	 Left	 Left
 Recall	 Back / Return	 OK	 OK

Original	Substitut	Original	Substitut
 Vol+	 Vol+	 TV	 DVD
 Vol-	 Vol-	 SAT	 AUX
 Mute	 Mute / Dimmer	 SLOW	 STEP-FREEZE
 Audio	 Audio / Lang I/II	 HOLD	 REC MODE
 Sub-T	 Subtitle / EQ	 TUNE-	 TUNE+
 CH+	 CH+ / Page+	 PRESET-	 PRESET+
 CH-	 CH- / Page-	 TITLE	 LANG I/II
 Menu	 Menu / Home	 EQ	 SURROUND
 Info	 Info / Angle	 SOUND	 AUDIO
 Input	 AV / Input / RDS	 SUBTITLE	 TIMER
 DVD Setup/Exit	 Exit / Cancel / Clear	 PICTURE	 ZOOM
 Sleep	 Sleep / Timer	 FORMAT	 SIZE
 Up	 Up	 SLEEP	 PROGRAM
 Down	 Down	 TOP MENU	 OPT-TOOLS
 Right	 Right	 GOTO	 RDS
 Left	 Left	 D.MENU	 SETUP
 OK	 OK	 TEXT	 AV INPUT



