










 

 

 
 


 
























 
 
 

 





 




Original	Substitut	Original	Substitut
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	TV/R		TV/Radio /
	SAT		Shift + 0
	SAT		Smart / List
	EPG		Guide / EPG / -/--
	Menu		Menu / Home

Original	Substitut	Original	Substitut
	FAV		Fav / Marker / PC
	Exit		Exit / Cancel / Clear
	Up / CH+		Up
	Up / CH+		CH+ / Page+
	Down / CH-		Down
	Down / CH-		CH- / Page-
	Left / Vol-		Left
	Left / Vol-		Vol-
	OK		OK
	Right / Vol+		Right
	Right / Vol+		Vol+
	Red / Audio		Red / Netflix / Search
	Red / Audio		Audio / Lang I/II
	Green / Mode		Green / APP / Repeat
	Yellow / Disp		Yellow / YouTube / Repeat
	Yellow / Disp		Display / Media
	Blue		Blue / Prime Video / Random





Original	Substitut
Page+	Shift + CH+ /
Page-	Shift + CH- /
Recall	Back / Return
F1 /Info	Info / Angle
F1 /Info	Shift + 1
F2 / SUB	Subtitle / EQ
F2 / SUB	Shift + 2
F3 / Goto	Shift + Text /
F3 / Goto	Shift + 3
TXT	Text / Goto
<<	<< / Tune-
>>	>> / Tune+
I<<	I<< / Preset-
>>I	>>I / Preset+
Play	Play / Slow
Stop / USB	Stop / Hold
Stop / USB	AV / Input / RDS

Original	Substitut
Stop / USB	Shift + 8
Pause	Pause / Step / Freeze
Rec	Rec / Rec Mode

