



 

 

















 





 







Original	Substitut
	 Power
	 AV / Input / RDS
	 Shift + Green / APP /
	 Picture / Format
	 Sound / Title
	 Sleep / Timer
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 0
	 Guide / EPG / -/--

Original	Substitut
	 Info / Angle
	 Smart / List
	 Mute / Dimmer
	 Menu / Home
	 Vol+
	 Vol-
	 CH+ / Page+
	 CH- / Page-
	 Setup / OPT /
	 D.Menu / Top
	 Back / Return
	 Exit / Cancel / Clear
	 Up
	 Down
	 Left
	 Right
	 OK





Original	Substitut	Original	Substitut
 Red/A	 Red / Netflix / Search		
 Green/B	 Green / APP / Repeat		
 Yellow/C	 Yellow / YouTube / Repeat		
 Blue/D	 Blue / Prime Video / Random		
	 << / Tune-		
	 Play / Slow		
	 >> / Tune+		
	 Stop / Hold		
	 Pause / Step / Freeze		
	 Rec / Rec Mode		
	 Subtitle / EQ		
	 Audio / Lang I/II		
	 Text / Goto		
	 Fav / Marker / PC		
 Youtube	 Shift + Yellow / YouTube /		
 Netflix	 Shift + Red / Netflix /		
 Rakuten tv	 Shift + Blue / Prime Video / Random		

