



 

 





 



 









 

 









 











 



 

 



 




 






 






 

 














Original	Substitut	Original	Substitut
 PWR	 Power	 Yellow/FAV	 Yellow / YouTube / Repeat
 Tv/Rad	 TV/Radio /	 Blue/A-Z	 Blue / Prime Video / Random
 Text	 Text / Goto	 Menu	 Menu / Home
 1	 1	 EPG	 Guide / EPG / -/-
 2	 2	 Info	 Info / Angle
 3	 3	 Up	 Up
 4	 4	 Down	 Down
 5	 5	 Right	 Right
 6	 6	 Left	 Left
 7	 7	 OK	 OK
 8	 8	 Vol+	 Vol+
 9	 9	 Vol-	 Vol-
 0	 0	 Exit	 Exit / Cancel / Clear
 Back	 Back / Return	 Page+	 CH+ / Page+
 Mute	 Mute / Dimmer	 Page-	 CH- / Page-
 Red/Opt	 Red / Netflix / Search	 Pause	 Pause / Step / Freeze
 Green/AV+	 Green / APP / Repeat	 Play	 Play / Slow

Original	Substitut	Original	Substitut
 PWR	 DIMMER MUTE	 SHIFT	
 TV	 DVD	 SAT	 AUX
 SLOW	 STEP - FREEZE	 HOLD	 REC MODE
 TUNE-	 TUNE+	 PRESET-	 PRESET+
 TITLE	 LANG UII	 EQ	 SURROUND
 SOUND	 AUDIO	 SUBTITLE	 PROGRAM
 FORMAT	 SIZE	 TIMER	 TV RADIO
 PICTURE	 ZOOM	 SLEEP	 RDS
 TOP MENU	 OPT-TOOLS	 GOTO	 AV INPUT
 D.MENU	 SETUP	 TEXT	 TV RADIO
 HOME	 ANGLE	 MENU	 INFO
 OK	 OK	 OK	 OK
 CLEAR	 EXIT	 CANCEL	 RETURN
 EXIT	 LIST	 SMART	 CH PAGE
 CANCEL	 MEDIA	 DISPLAY	 CH PAGE
 VOL+	 VOL+	 VOL+	 VOL+
 VOL-	 VOL-	 VOL-	 VOL-
 TV	 DVD	 CD - STB	 CD - STB
 1	 TAPE	 TUNER	 TUNER
 4	 AUX - HDD	 USB	 BLUETOOTH
 5	 HDMI - SAT	 PC	 PC
 7	 GUIDE EPG	 FAV MARKER	 FAV MARKER
8	NETFLIX	APP	YouTube
9	SEARCH	REPEAT	REPEAT A-B
0	REPEAT	REPEAT A-B	RANDOM
GUIDE EPG	NETFLIX	APP	YouTube
SEARCH	REPEAT	REPEAT A-B	RANDOM





	Original	Substitut	Original	Substitut
	<<		<< / Tune-	
	Stop		Stop / Hold	
	>>		>> / Tune+	
	Rec		Rec / Rec Mode	
	Slow		Shift + Play /	
	List		Smart / List	
	A-B		D.Menu / Top	
	Mark		Fav / Marker / PC	
	Jump		Subtitle / EQ	
	PIP		Zoom / Size	
	Swap		Setup / OPT /	
	Move		Display / Media	
	Sleep		Sleep / Timer	

