
































Original	Substitut	Original	Substitut
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	-/--		Shift + Guide / EPG / -/--
	0		0
	Recall		Back / Return
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	FAV		Fav / Marker / PC

Original	Substitut	Original	Substitut
	Vol+		Vol+
	MTS I/II		Audio / Lang I/II
	CH+		CH+ / Page+
	Vol-		Vol-
	Sub-T		Subtitle / EQ
	CH-		CH- / Page-
	Aspect		Zoom / Size
	Freeze		Shift + Pause / Step /
	Sleep		Sleep / Timer
	Source		AV / Input / RDS
	Up		Up
	Display		Display / Media
	Left		Left
	OK		OK
	Right		Right
	Menu		Menu / Home
	Down		Down





Original	Substitut	Original	Substitut
EXIT	Exit	CLEAR EXIT CANCEL	Exit / Cancel / Clear
Red	Red	NETFLIX SEARCH	Red / Netflix / Search
Green	Green	APP REPEAT	Green / APP / Repeat
Yellow	Yellow	YouTube REPEAT A-B	Yellow / YouTube / Repeat
Blue	Blue	Prime Video RANDOM	Blue / Prime Video / Random
TEXT/CC	<< / Text/CC	TUNE-	<< / Tune-
TEXT/CC	<< / Text/CC	GOTO TEXT	Text / Goto
SUB.PG	Play/Pause /	STEP-FREEZE	Pause / Step / Freeze
SUB.PG	Play/Pause /	SLOW	Play / Slow
REVEAL	>> / Reveal	TUNE+	>> / Tune+
HOLD	<< / Hold	PRESET-	<< / Preset-
SIZE	>>  / Size	PRESET+	>>  / Preset+
INDEX	Stop / Index	HOLD	Stop / Hold
ROOT	Root	OPT-TOOLS SETUP	Setup / OPT /
REPEAT	Repeat	SHIFT + APP REPEAT	Shift + Green / APP /
LIST	List	LIST SMART	Smart / List
T.SHIFT	T.Shift	TOP MENU D.MENU	D.Menu / Top

Original	Substitut	Original	Substitut
REC	Rec	REC MODE	Rec / Rec Mode
EPG	EPG	GUIDE EPG	Guide / EPG / -/-

