

























 



 


































 






Original	Substitut	Original	Substitut
 Standby	 Power	 Menu	 Menu / Home
 USB/Card	 Shift + 8	 Setup	 Setup / OPT /
 Open/Close	 Eject / Surround	 Display	 Display / Media
 Audio	 Audio / Lang I/II	 Title	 Sound / Title
 Subtitle	 Subtitle / EQ	 Left	 Left
 Search	 Red / Netflix / Search	 Up	 Up
 1	 1	 Right	 Right
 2	 2	 Enter	 OK
 3	 3	 Down	 Down
 4	 4	 <<	 << / Tune-
 5	 5	 >>	 >> / Tune+
 6	 6	 I<<	 I<< / Preset-
 7	 7	 >>I	 >>I / Preset+
 8	 8	 Step	 Pause / Step / Freeze
 9	 9	 Stop	 Stop / Hold
 Clear	 Exit / Cancel / Clear	 Play/Pause	 Play / Slow
 0/10	 0	 Vol+	 Vol+

Original	Substitut	Original	Substitut
 Menu	 Menu / Home	 Setup	 Setup / OPT /
 Display	 Display / Media	 Title	 Sound / Title
 Left	 Left	 Up	 Up
 Right	 Right	 Enter	 OK
 Down	 Down	 <<	 << / Tune-
 >>	 >> / Tune+	 I<<	 I<< / Preset-
 >>I	 >>I / Preset+	 Step	 Pause / Step / Freeze
 Stop	 Stop / Hold	 Play/Pause	 Play / Slow
 Vol+	 Vol+		





Original	Substitut
Repeat	Green / APP / Repeat
A-B	Yellow / YouTube / Repeat
Angle	Info / Angle
Mute	Mute / Dimmer
Vol-	Vol-
L/R	AV / Input / RDS
N/P	Text / Goto
PBC	Smart / List
Slow	+ Shift + Play /
V-Mode	D.Menu / Top
Return	Back / Return
HD/Res.	Picture / Format
Program	TV/Radio /
Zoom	Zoom / Size

Original	Substitut

