

























 











Original	Substitut	Original	Substitut
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	EPG		Guide / EPG / -/-
	Rec		Rec / Rec Mode
	Info		Info / Angle
	Vol+		Vol+
	Vol-		Vol-

Original	Substitut	Original	Substitut
	CH+		CH+ / Page+
	CH-		CH- / Page-
	≡		D.Menu / Top
	Input		AV / Input / RDS
	Smart Colors		Display / Media
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		OK
	Back		Back / Return
	Exit		Exit / Cancel / Clear
	Red		Red / Netflix / Search
	Home		Menu / Home
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random





	Original	Substitut		Original	Substitut
		<<		<< / Tune-	
		>>		>> / Tune+	
		Play		Play / Slow	
		Pause		Pause / Step / Freeze	
		Stop		Stop / Hold	
		Subt		Subtitle / EQ	
		Audio		Audio / Lang I/II	
		TXT		Text / Goto	
		Netflix		Shift + Red / Netflix /	
		YouTube		Shift + Yellow / YouTube /	
		prime video		Shift + Blue / Prime	
		Google Play		Shift + Green / APP /	

	Original	Substitut		Original	Substitut

