











Original	Substitut	Original	Substitut
 Power	 Power	 <<	 << / Tune-
 Mute	 Mute / Dimmer	 >>	 >> / Tune+
 Red	 Red / Netflix / Search	 Rec	 Rec / Rec Mode
 Green	 Green / APP / Repeat	 Stop	 Stop / Hold
 Yellow	 Yellow / YouTube / Repeat	 I<<	 I<< / Preset-
 Blue	 Blue / Prime Video / Random	 >>I	 >>I / Preset+
 Fav	 Fav / Marker / PC	 Source	 AV / Input / RDS
 Guide	 Guide / EPG / -/--	 Up	 Up
 Index	 Info / Angle	 Display	 Display / Media
 Size	 Zoom / Size	 Left	 Left
 Text	 Text / Goto	 OK	 OK
 Hold	 Shift + Stop /	 Right	 Right
 TV/Radio	 TV/Radio /	 TV Menu	 Menu / Home
 Subtitle	 Subtitle / EQ	 Down	 Down
 Subpage	 Shift + Subtitle / EQ	 Exit	 Exit / Cancel / Clear
 Play / Pause	 Play / Slow	 Vol+	 Vol+
 Play / Pause	 Pause / Step / Freeze	 Aspect	 Shift + Picture / Format

Original	Substitut	Original	Substitut
 DIMMER MUTE	 SHIFT	 TV	 DVD
 STEP-FREEZE	 HOLD	 PRESET-	 PRESET+
 TUNE-	 TUNE+	 TITLE	 LANG UI
 EQ	 SURROUND	 SOUND	 AUDIO
 SUBTITLE	 TIMER	 FORMAT	 SIZE
 PICTURE	 ZOOM	 TOP MENU	 OPT-TOOLS
 D.MENU	 SETUP	 GOTO	 RDS
 HOME	 ANGLE	 MENU	 INFO
 CLEAR	 RETURN	 EXIT	 BACK
 CANCEL	 LIST	 VOL+	 CH PAGE
 TV	 SMART	 1	 2
 VIDEO	 MEDIA	 4	 6
 AUX-HDD	 DISPLAY	 7	 9
 GUIDE EPG	 0	 --	 PC
 NETFLIX	 APP	--	FAV MARKER
SEARCH	REPEAT	REPEAT A-B	RANDOM
www.mandis.tv			





	Original	Substitut
	CH+	CH+ / Page+
	Vol-	Vol-
	Audio	Audio / Lang I/II
	CH-	CH- / Page-
	1	1
	2	2
	3	3
	4	4
	5	5
	6	6
	7	7
	8	8
	9	9
	-/-	SHIFT + GUIDE EPG / Shift + Guide / EPG / -/-
	0	0
	Recall	Back / Return
	Sleep	Sleep / Timer

	Original	Substitut
	P-Mode	Picture / Format
	S-Mode	Sound / Title

