



Original	Substitut
Power	Power
Mute	Mute / Dimmer
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Lang	Audio / Lang I/II
Tv/Radio	TV/Radio /
Game	D.Menu / Top
FAV	Fav / Marker / PC
Recall	Back / Return

Original	Substitut
Dev.List	Display / Media
EPG	Guide / EPG / -/-
Subtitle	Subtitle / EQ
Text	Text / Goto
Info	Info / Angle
Menu	Menu / Home
Exit	Exit / Cancel / Clear
Zoom	Zoom / Size
Timeshift	Setup / OPT /
CH+	CH+ / Page+
CH-	CH- / Page-
Up	Up
Down	Down
Right	Right
Left	Left
Enter	OK
Vol+	Vol+





Original	Substitut	Original	Substitut
	Vol-		Vol-
	Rec		Rec / Rec Mode
	Stop		Stop / Hold
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	<<		<< / Tune-
	>>		>> / Tune+
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	Filelist		Smart / List
	Red/FAV/Daily		Red / Netflix / Search
	Green/DEL/Weekl		Green / APP / Repeat
	Yellow/Move/P.Inf		Yellow / YouTube / Repeat
	Blue/Lock/Timer		Blue / Prime Video / Random

Original	Substitut	Original	Substitut

