



Original	Substitut	Original	Substitut
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0 / Sleep		0
	0 / Sleep		Sleep / Timer
	TV/Rad		TV/Radio /
	TV / SAT		AV / Input / RDS
	CH+		CH+ / Page+
	CH-		CH- / Page-

Original	Substitut	Original	Substitut
	Vol+		Vol+
	Vol-		Vol-
	Menu		Menu / Home
	Recall		Back / Return
	P+		Shift + CH+ /
	P-		Shift + CH- /
	Text		Text / Goto
	Exit		Exit / Cancel / Clear
	Fav		Fav / Marker / PC
	EPG		Guide / EPG / -/--
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Red / V-FMT		Red / Netflix / Search
	Red / V-FMT		Picture / Format





Original	Substitut
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	Blue / Timer
	Info / Angle
	Subtitle / EQ
	Audio / Lang I/II
	Shift + Red / Netflix /
	Rec / Rec Mode
	Stop / Hold
	Play / Slow
	Pause / Step / Freeze
	<< / Tune-
	>> / Tune+
	I<< / Preset-
	>>I / Preset+
	Shift + Left

Original	Substitut
	Shift + Right
	Smart / List
	Shift + 8
	Display / Media

