




Original	Substitut	Original	Substitut
 Power	 Power	 Vol-	 Vol-
 Source (Games)	 AV / Input / RDS	 World/Internet	 Smart / List
 1	 1	 PR-	 CH- / Page-
 2	 2	 Menu	 Menu / Home
 3	 3	 Q.Menu	 D.Menu / Top
 4	 4	 Up	 Up
 5	 5	 Left	 Left
 6	 6	 OK	 OK
 7	 7	 Right	 Right
 8	 8	 Down	 Down
 9	 9	 Back	 Back / Return
 TV	 TV/Radio /	 Exit	 Exit / Cancel / Clear
 0	 0	 i	 Info / Angle
 Recall	 Fav / Marker / PC	 Movie-Music-Phot	 Display / Media
 Vol+	 Vol+	 Guide	 Guide / EPG / -/-
 Mute	 Mute / Dimmer	 */o	 Picture / Format
 PR+	 CH+ / Page+	 */o..	 Setup / OPT /

Original	Substitut	Original	Substitut
 Power	 Power	 Vol-	 Vol-
 Source (Games)	 AV / Input / RDS	 World/Internet	 Smart / List
 1	 1	 PR-	 CH- / Page-
 2	 2	 Menu	 Menu / Home
 3	 3	 Q.Menu	 D.Menu / Top
 4	 4	 Up	 Up
 5	 5	 Left	 Left
 6	 6	 OK	 OK
 7	 7	 Right	 Right
8	8	Down	Down
9	9	Back	Back / Return
TV	TV/Radio /	Exit	Exit / Cancel / Clear
0	0	i	Info / Angle
Recall	Fav / Marker / PC	Movie-Music-Phot	Display / Media
Vol+	Vol+	Guide	Guide / EPG / -/-
Mute	Mute / Dimmer	*/o	Picture / Format
PR+	CH+ / Page+	*/o..	Setup / OPT /





	Original	Substitut	Original	Substitut
	[≡]/Text	 GOTO TEXT		Text / Goto
	Red	 NETFLIX SEARCH		Red / Netflix / Search
	Green	 APP REPEAT		Green / APP / Repeat
	Yellow	 YouTube REPEAT A-B		Yellow / YouTube / Repeat
	Blue	 Prime Video RANDOM		Blue / Prime Video / Random
	Lang	 LANG I/II AUDIO		Audio / Lang I/II
	[≡]..	 EQ SUBTITLE		Subtitle / EQ
	[-o-]	 SIZE ZOOM		Zoom / Size
	<<	 TUNE- TUNE-		<< / Tune-
	Pause	 STEP-FREEZE STEP-FREEZE		Pause / Step / Freeze
	>>	 TUNE+ TUNE+		>> / Tune+
	Rec	 REC MODE REC MODE		Rec / Rec Mode
	Play	 SLOW SLOW		Play / Slow
	Stop	 HOLD HOLD		Stop / Hold

