



Original	Substitut	Original	Substitut
	Standby/On		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Child Lock		Setup / OPT /
	Monitor		Display / Media
	Select		Smart / List
	Timer		Sleep / Timer
	Record		Rec / Rec Mode
	Menu		Menu / Home
	P+		CH+ / Page+
	Up		Up
	CL/Clear		Exit / Cancel / Clear
	Left		Left
	Vol-		Vol-
	OK		OK
	Right		Right
	Vol+		Vol+
	>I/Index		>>I / Preset+
	P-		CH- / Page-
	Down		Down
	>I</Still		Pause / Step / Freeze
	<<		<< / Tune-
	Stop		Stop / Hold
	Play		Play / Slow
	>>		>> / Tune+

