







 











 















 



 



 



 

 

 







 



























 





Original		Substitut		Original		Substitut	
	Power		Power		8		8
	Freeze		Pause / Step / Freeze		9		9
	Subtitle		Subtitle / EQ		Jump		Back / Return
	Guide		Guide / EPG / -/--		0		0
	Fav.CH		Fav / Marker / PC		Ent		Display / Media
	I-II		Audio / Lang I/II		Vol+		Vol+
	Text / Mix		Text / Goto		Info		Info / Angle
	Mute		Mute / Dimmer		CH+		CH+ / Page+
	Sleep		Sleep / Timer		Vol-		Vol-
	P.Size		Setup / OPT /		Input		AV / Input / RDS
	1		1		CH-		CH- / Page-
	2		2		Exit		Exit / Cancel / Clear
	3		3		Menu		Menu / Home
	4		4		Up		Up
	5		5		Left		Left
	6		6		OK		OK
	7		7		Right		Right





Original	Substitut	Original	Substitut
	S.Mode		Sound / Title
	Down		Down
	P.Mode		Picture / Format
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Index		Rec / Rec Mode
	Reveal		Play / Slow
	Size		Zoom / Size
	Hold		Stop / Hold

Original	Substitut

