
 




 
 

















Original	Substitut
	Subtitle / EQ
	Picture / Format
	Sleep / Timer
	Up
	Down
	Red / Netflix / Search
	Right
	Left
	CH+ / Page+
	Vol+
	Vol-
	OK
	Back / Return
	TV/Radio /
	Info / Angle
	Guide / EPG / -/--
	Fav / Marker / PC

Original	Substitut
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	CH- / Page-
	Blue / Prime Video / Random
	I<< / Preset-
	>>I / Preset+
	Pause / Step / Freeze
	Stop / Hold
	Rec / Rec Mode
	<< / Tune-
	Play / Slow
	>> / Tune+
	7
	Mute / Dimmer
	Menu / Home
	Exit / Cancel / Clear
	1



