







Original	Substitut
	 Power
	 Eject / Surround
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 0
	 Guide / EPG / -/--
	 Back / Return
	 Vol+
	 Shift + Sound / Title
	 D.Menu / Top

Original	Substitut
	 CH+ / Page+
	 Vol-
	 Display / Media
	 CH- / Page-
	 Up
	 Left
	 OK
	 Right
	 Menu / Home
	 Down
	 Setup / OPT /
	 Exit / Cancel / Clear
	 AV / Input / RDS
	 Picture / Format
	 Sound / Title
	 Mute / Dimmer
	 Play / Slow









 
 


 
 
 
 
 
 
 


Original	Substitut
Stop	Stop / Hold
Slow / Step	Shift + Play /
Slow / Step	Shift + Pause / Step /
Audio / Nicam	Audio / Lang I/II
Text / <<	Text / Goto
Text / <<	<< / Tune-
>> / Mix	>> / Tune+
Hold / Goto	Shift + Text /
Hold / Goto	Shift + Stop /
Subpage /	Info / Angle
I<< / Index	I<< / Preset-
>>I / Size	Shift + Zoom /
>>I / Size	>>I / Preset+
Reveal / Zoom	Zoom / Size
Picture / Subtitle	Shift + Picture / Format
Picture / Subtitle	Subtitle / EQ
Red / Program	Red / Netflix / Search



 










Original	Substitut
Red / Program	TV/Radio /
Green / Intro	Green / APP / Repeat
Yellow / Repeat	Yellow / YouTube / Repeat
Yellow / Repeat	Shift + Green / APP /
Blue / A-B	Blue / Prime Video / Random
Blue / A-B	Shift + Yellow / YouTube /







Original	Substitut
	Standby
	Mute
	Play
	Pause
	Stop
	<<
	>>
	I<<
	>>I
	S.Mode
	Audio/Reveal
	Zoom/Subpage
	P.Mode
	Size
	Sleep
	D.Menu
	Text

Substitut	Original
Power	
Mute / Dimmer	
Play / Slow	
Pause / Step / Freeze	
Stop / Hold	
<< / Tune-	
>> / Tune+	
I<< / Preset-	
>>I / Preset+	
Sound / Title	
Audio / Lang I/II	
Subtitle / EQ	
Picture / Format	
Zoom / Size	
Sleep / Timer	
D.Menu / Top	
Text / Goto	

Original	Substitut
	Input
	LCD Menu
	Up
	Index
	Left
	Enter
	Right
	Down
	Recall
	Vol+
	DVD Setup
	CH+
	Vol-
	Display
	CH-
	1
	2

Substitut	Original
AV / Input / RDS	
Menu / Home	
Up	
Info / Angle	
Left	
OK	
Right	
Down	
Back / Return	
Vol+	
Smart / List	
CH+ / Page+	
Vol-	
Display / Media	
CH- / Page-	
1	
2	





Original	Substitut
	3
	4
	5
	6
	7
	8
	9
	Guide / EPG / -/--
	0
	Fav / Marker / PC
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
Hold	+ Shift + Stop /
Title	+ Shift + Sound / Title
Nicam	+ Shift + Audio / Lang I/II

Original	Substitut
Aspect	+ Shift + Picture / Format
D.Subt.	+ Shift + Zoom /
Goto	+ Shift + Text /
Angle	+ Shift + Info / Angle
Slow/PgUp	+ Shift + CH+ /
D.Disp	+ Shift + Display / Media
Step/PgDn	+ Shift + CH- /

