





 



 



 







 


 



 























 



 



 







Original	Substitut	Original	Substitut
 Power	 Power	 4	 4
E3	 +  Shift + Guide / EPG / -/-	 5	 5
E2	 +  Shift + 9	 6	 6
 Mute	 Mute / Dimmer	 L/R	 Audio / Lang I/II
A1	 +  Shift + 1	 7	 7
A2	 +  Shift + 2	 8	 8
B1	 +  Shift + 3	 9	 9
B2	 +  Shift + 4	 P/N	 Picture / Format
C1	 +  Shift + 5	 Repeat	 Green / APP / Repeat
C2	 +  Shift + 6	 0/10	 0
D1	 +  Shift + 7	 10+	 Guide / EPG / -/-
D2	 +  Shift + 8	 Zoom	 Zoom / Size
 EQ	 Subtitle / EQ	 TV-Mode	 TV/Radio /
 1	 1	 I<<	 I<< / Preset-
 2	 2	 >>I	 >>I / Preset+
 3	 3	 Stop	 Stop / Hold
 OSD	 Display / Media	 Play	 Play / Slow





 



 





 



 

 







 

 





 













 

 



 

 

 





 





Original	Substitut	Original	Substitut
 Pause	 Pause / Step / Freeze	 Vol+	 Vol+
 <<	 << / Tune-	 Input	 AV / Input / RDS
 >>	 >> / Tune+	 Treb-	 CH- / Page-
 USB/Card	 Smart / List	 Sub-	 Shift + CH- /
 Up	 Up	 Vol-	 Vol-
 Menu	 Menu / Home		
 Left	 Left		
 Enter	 OK		
 Right	 Right		
 Return	 Back / Return		
 Down	 Down		
 Setup	 Setup / OPT /		
 2.1/5.1CH	 Sound / Title		
 CH-Sel	 Fav / Marker / PC		
 Reset	 Exit / Cancel / Clear		
 Treb+	 CH+ / Page+		
 Sub+	 Shift + CH+ / Page+		

Page+





Original	Substitut	Original	Substitut
A1	 +  Shift + 1	 3	 3
A2	 +  Shift + 2	 OSD	 Display / Media
B1	 +  Shift + 3	 4	 4
B2	 +  Shift + 4	 5	 5
C1	 +  Shift + 5	 6	 6
C2	 +  Shift + 6	 L/R	 Audio / Lang I/II
D1	 +  Shift + 7	 7	 7
D2	 +  Shift + 8	 8	 8
 Power	 Power	 9	 9
E2	 +  Shift + Guide / EPG / -/--	 P/N	 Picture / Format
E3	 +  Shift + 0	 Repeat	 Green / APP / Repeat
E4	 +  Shift + Fav / Marker / PC	 0/10	 0
E1	 +  Shift + 9	 10+	 Guide / EPG / -/--
 Mute	 Mute / Dimmer	 Zoom	 Zoom / Size
 EQ	 Subtitle / EQ	 TV-Mode	 TV/Radio /
 1	 1	 I<<	 I<< / Preset-
 2	 2	 >>I	 >>I / Preset+





Original	Substitut	Original	Substitut
	Stop		Stop / Hold
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	<<		<< / Tune-
	>>		>> / Tune+
	USB/Card		Smart / List
	Up		Up
	Menu		Menu / Home
	Left		Left
	Enter		OK
	Right		Right
	Return		Back / Return
	Down		Down
	Setup		Setup / OPT /
	Reset		Exit / Cancel / Clear
	Treb+		CH+ / Page+
	Sub+		Shift + CH+ / Page+

Page+

