 

 





 




 




 

 

 

 



 

 

 



 

 

 
 
 

 







 





 



 









| Original | Substitut | Original | Substitut |
|--|---|--|---|
|  Input |  AV / Input / RDS |  OK |  OK |
|  Power |  Power |  Right |  Right |
|  Amazon |  Blue / Prime Video / Random |  Down |  Down |
|  Netflix |  Red / Netflix / Search |  Back |  Back / Return |
|  iHeart Radio |  Setup / OPT / |  Guide |  Guide / EPG / -/- |
|  << |  << / Tune- |  Vol+ |  Vol+ |
|  Pause |  Pause / Step / Freeze |  V |  Display / Media |
|  Play |  Play / Slow |  CH+ |  CH+ / Page+ |
|  >> |  >> / Tune+ |  Vol- |  Vol- |
|  CC |  Subtitle / EQ |  CH- |  CH- / Page- |
|  Rec |  Rec / Rec Mode |  Mute |  Mute / Dimmer |
|  Stop |  Stop / Hold |  [] |  Zoom / Size |
|  Menu |  Menu / Home |  PIC |  Picture / Format |
|  Exit |  Exit / Cancel / Clear |  Recall |  Fav / Marker / PC |
|  Info |  Info / Angle |  1 |  1 |
|  Up |  Up |  2 |  2 |
|  Left |  Left |  3 |  3 |





| Original | | Substitut | | Original | | Substitut | |
|----------|-------|--------------|--------------|----------|--|-----------|--|
| 4 | 4 | VIDEO 4 | 4 | | | | |
| 5 | 5 | TAPE 5 | 5 | | | | |
| 6 | 6 | TUNER 6 | 6 | | | | |
| 7 | 7 | AUX - HDD 7 | 7 | | | | |
| 8 | 8 | USB 8 | 8 | | | | |
| 9 | 9 | BLUETOOTH 9 | 9 | | | | |
| ENTER | Enter | LIST SMART | Smart / List | | | | |
| 0 | 0 | HDMI - BAT 0 | 0 | | | | |
| -- | -- | GOTO TEXT | Text / Goto | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |

