 


 



 



 



 







 



 


 
 



 



 



 







 



 









 











 





 

 

 

 

 



Original	Substitut	Original	Substitut
 Power	 Power	 ←	 Left
 Timer	 Sleep / Timer	 Mute	 Mute / Dimmer
 Sub TV	 TV/Radio /	 Stereo	 Audio / Lang I/II
 Preview	 Smart / List	 Source	 AV / Input / RDS
 Snap	 Display / Media	 Zoom	 Zoom / Size
 Shut Down	 Setup / OPT /	 Min	 Back / Return
 1	 1	 Up	 Up
 2	 2	 Down	 Down
 3	 3	 Left	 Shift + Left
 4	 4	 Right	 Right
 5	 5	 Enter	 OK
 6	 6	 Timeshift	 Picture / Format
 7	 7	 Stop	 Stop / Hold
 8	 8	 Rec	 Rec / Rec Mode
 9	 9	 <<	 << / Tune-
 0	 0	 >>	 >> / Tune+
 ↑	 Guide / EPG / -/--	 Play	 Play / Slow

Original	Substitut	Original	Substitut
 Power	 Power	 ←	 Left
 Timer	 Sleep / Timer	 Mute	 Mute / Dimmer
 Sub TV	 TV/Radio /	 Stereo	 Audio / Lang I/II
 Preview	 Smart / List	 Source	 AV / Input / RDS
 Snap	 Display / Media	 Zoom	 Zoom / Size
 Shut Down	 Setup / OPT /	 Min	 Back / Return
 1	 1	 Up	 Up
 2	 2	 Down	 Down
 3	 3	 Left	 Shift + Left
 4	 4	 Right	 Right
 5	 5	 Enter	 OK
 6	 6	 Timeshift	 Picture / Format
 7	 7	 Stop	 Stop / Hold
 8	 8	 Rec	 Rec / Rec Mode
 9	 9	 <<	 << / Tune-
 0	 0	 >>	 >> / Tune+
 ↑	 Guide / EPG / -/--	 Play	 Play / Slow





Original	Substitut
 Pause	 Pause / Step / Freeze
 Stop	 Shift + Stop /
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 Fun1	 Red / Netflix / Search
 Fun2	 Green / APP / Repeat
 Fun3	 Yellow / YouTube / Repeat
 Fun4	 Blue / Prime Video / Random

Original	Substitut

