

































 





































Original	Substitut	Original	Substitut
 Power	 Power	 Tv/Radio	 TV/Radio /
 Mute	 Mute / Dimmer	 i	 Info / Angle
 USB/Media 1	 Display / Media	 Sleep	 Sleep / Timer
 USB/Media 1	 Shift + 8	 Source	 AV / Input / RDS
 Play/Pause/Text	 Text / Goto	 Menu	 Menu / Home
 Play/Pause/Text	 Play / Slow	 Left	 Left
 Play/Pause/Text	 Pause / Step / Freeze	 Up	 Up
 Stop/Index	 Stop / Hold	 Right	 Right
 Rec/Media2	 Rec / Rec Mode	 OK	 OK
 Rec/Media2	 Shift + Display / Media	 Down	 Down
 I<</Hold	 I<< / Preset-	 Mouse	 Shift + OK
 >>I/Size	 >>I / Preset+	 Smart	 Smart / List
 <</S. Page	 << / Tune-	 Exit	 Exit / Cancel / Clear
 >>/Reveal	 >> / Tune+	 CH+	 CH+ / Page+
 I-II/Nicam	 Shift + Picture / Format	 EPG	 Guide / EPG / -/-
 Audio	 Audio / Lang I/II	 VOL+	 Vol+
 Subtitle	 Subtitle / EQ	 CH-	 CH- / Page-





Original	Substitut	Original	Substitut
Open/Close	Eject / Surround	9	9
Vol-	Vol-	FAV	Fav / Marker / PC
D.Setup	Setup / OPT /	0	0
Picture	Picture / Format	Recall	Back / Return
D.Menu	D.Menu / Top	Red	Red / Netflix / Search
Sound	Sound / Title	Green	Green / APP / Repeat
D.Title	Shift + Sound / Title	Yellow	Yellow / YouTube / Repeat
P.Size	Zoom / Size	Blue	Blue / Prime Video / Random
D.Prog	Shift + TV/Radio / Program		
1	1		
2	2		
3	3		
4	4		
5	5		
6	6		
7	7		
8	8		

Original	Substitut	Original	Substitut
9	9	9	9
FAV	Fav / Marker / PC	0	0
Recall	Back / Return	Red	Red / Netflix / Search
Green	Green / APP / Repeat	Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random		

