





Original	Substitut	Original	Substitut
 Power	 Power	 Source	 AV / Input / RDS
 Mute	 Mute / Dimmer	 Up	 Up
 1	 1	 Audio / Nicam	 Audio / Lang I/II
 2	 2	 Left	 Left
 3	 3	 OK	 OK
 4	 4	 Right	 Right
 5	 5	 Down	 Down
 6	 6	 Exit	 Exit / Cancel / Clear
 7	 7	 Menu	 Menu / Home
 8	 8	 Vol+	 Vol+
 9	 9	 Mouse On/Off	 D.Menu / Top
 Recall	 Back / Return	 CH+	 CH+ / Page+
 0	 0	 Vol-	 Vol-
 Sleep	 Sleep / Timer	 Home	 Shift + Menu /
	 Shift + 1	 CH-	 CH- / Page-
	 Shift + 2	 P.Mode	 Picture / Format
 CH.List	 Smart / List	 S.Mode	 Sound / Title

Original	Substitut	Original	Substitut
 Power	 Power	 Source	 AV / Input / RDS
 Mute	 Mute / Dimmer	 Up	 Up
 1	 1	 Audio / Nicam	 Audio / Lang I/II
 2	 2	 Left	 Left
 3	 3	 OK	 OK
 4	 4	 Right	 Right
 5	 5	 Down	 Down
 6	 6	 Exit	 Exit / Cancel / Clear
 7	 7	 Menu	 Menu / Home
 8	 8	 Vol+	 Vol+
 9	 9	 Mouse On/Off	 D.Menu / Top
 Recall	 Back / Return	 CH+	 CH+ / Page+
 0	 0	 Vol-	 Vol-
 Sleep	 Sleep / Timer	 Home	 Shift + Menu /
	 Shift + 1	 CH-	 CH- / Page-
	 Shift + 2	 P.Mode	 Picture / Format
 CH.List	 Smart / List	 S.Mode	 Sound / Title





Original	Substitut	Original	Substitut
 Display	 Display / Media	 Yellow	 Yellow / YouTube / Repeat
 Fav	 Fav / Marker / PC	 Blue	 Blue / Prime Video / Random
 TXT	 Text / Goto		
 Sub / Index	 Subtitle / EQ		
 EPG / S.Page	 Guide / EPG / -/--		
 Size	 Zoom / Size		
 Stop	 Stop / Hold		
 I<<	 I<< / Preset-		
 >>I	 >>I / Preset+		
 Hold / Aspect	 Setup / OPT /		
 Hold / Aspect	 Shift + Stop /		
 Play / Pause	 Play / Slow		
 <<	 << / Tune-		
 >>	 >> / Tune+		
 Reveal / Antena	 TV/Radio /		
 Red	 Red / Netflix / Search		
 Green	 Green / APP / Repeat		

