



Original	Substitut
	Power
	Vol+
	Vol-
	Home
	CH+ / Page+
	CH- / Page-
	Guide / EPG / -/--
	AV / Input / RDS
	Back / Return
	Exit / Cancel / Clear
	OK
	Up
	Down
	Right
	Left
	Play / Slow
	Stop / Hold

Original	Substitut
	Display / Media
	1
	TV/Radio /
	Red / Netflix / Search
	Fav / Marker / PC

