





















 





















 





 

 



 







 







Original	Substitut	Original	Substitut
	Power		Power
	Energy Saving		Sleep / Timer
	AV Mode		Picture / Format
	Input		AV / Input / RDS
	Tv/Rad		TV/Radio /
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	List		Smart / List
	0		0
	Q.Vlew		Setup / OPT /

Original	Substitut	Original	Substitut
	Vol+		Vol+
	FAV/Mark/Char/Nu		Fav / Marker / PC
	P+		CH+ / Page+
	Vol-		Vol-
	3D		Zoom / Size
	Mute/Delete		Mute / Dimmer
	P-		CH- / Page-
	Menu		Menu / Home
	NetCast		Sound / Title
	Q.Menu		D.Menu / Top
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Exit		Exit / Cancel / Clear
	Back		Back / Return



