





 

 

 





 





 

 








 
 











 





 



 









 





Original	Substitut	Original	Substitut
	Mute		Mute / Dimmer
	Power		Power
	[]/[+]		TV/Radio /
	Input		AV / Input / RDS
	[=]		Text / Goto
	[X]/[o]		Zoom / Size
	1		1
	2		2
	3		3
	[♦]		Picture / Format
	4		4
	5		5
	6		6
	[?]/[i+]		Subtitle / EQ
	7		7
	8		8
	9		9
	↔		Smart / List
	-/--		Guide / EPG / -/--
	0		0
	C		Fav / Marker / PC
	[]/[=i]		Display / Media
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Menu		Menu / Home
	+		Up
	Vol+		Vol+
	Progr+		CH+ / Page+
	→←		OK
	-		Down
	Vol-		Vol-
	Progr-		CH- / Page-





Original	Substitut	Original	Substitut
[+]	Setup / OPT /		
<< VTR1	<< / Tune-		
Play VTR1	Play / Slow		
>> VTR1	>> / Tune+		
Power VTR1	+ Shift + Power		
Stop VTR1	Stop / Hold		
Pause VTR1	Pause / Step / Freeze		
Progr+ VTR1	+ Shift + CH+ /		
Rec VTR1	Rec / Rec Mode		
Progr- VTR1	+ Shift + CH- /		


















Original	Substitut	Original	Substitut
Power VTR2	Power		
Progr+ VTR2	CH+ / Page+		
Progr- VTR2	CH- / Page-		
Play VTR2	Play / Slow		
>> VTR2	>> / Tune+		
<< VTR2	<< / Tune-		
Stop VTR2	Stop / Hold		
Pause VTR2	Pause / Step / Freeze		
Rec VTR2	Rec / Rec Mode		












 







	Original	Substitut	Original	Substitut
	Power VTR3			
	Play VTR3			
	>> VTR3			
	<< VTR3			
	Stop VTR3			
	Pause VTR3			
	Prog+ VTR3			
	Prog- VTR3			
	Rec VTR3			





Original		Substitut		Original	Substitut
	<< MDP		<< / Tune-		
	Play MDP		Play / Slow		
	>> MDP		>> / Tune+		
	Power MDP		Power		
	Stop MDP		Stop / Hold		
	Pause MDP		Pause / Step / Freeze		
	Progr+ MDP		CH+ / Page+		
	Progr- MDP		CH- / Page-		

