





Original	Substitut	Original	Substitut
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Info		Info / Angle
	0		0
	Audio		Audio / Lang I/II
	Pause		Pause / Step / Freeze
	Mode		Picture / Format
	PRE		Back / Return

Original	Substitut	Original	Substitut
	Menu		Menu / Home
	EPG		Guide / EPG / -/-
	Exit		Exit / Cancel / Clear
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Tv/Radio		TV/Radio /
	Down		Down
	Tv/SAT		Smart / List
	P-		CH- / Page-
	UHF		Display / Media
	FAV		Fav / Marker / PC
	P+		CH+ / Page+
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat









Original	Substitut	Original	Substitut
 Power	 Power	 Menu	 Menu / Home
 Mute	 Mute / Dimmer	 EPG	 Guide / EPG / -/-
 1	 1	 Exit	 Exit / Cancel / Clear
 2	 2	 Up	 Up
 3	 3	 Left	 Left
 4	 4	 OK	 OK
 5	 5	 Right	 Right
 6	 6	 TV/Radio	 TV/Radio /
 7	 7	 Down	 Down
 8	 8	 TV/SAT	 Smart / List
 9	 9	 P-	 CH- / Page-
 Info	 Info / Angle	 P+	 CH+ / Page+
 0	 0	 Red	 Red / Netflix / Search
 Audio	 Audio / Lang I/II	 Green	 Green / APP / Repeat
 Pause	 Pause / Step / Freeze	 Yellow	 Yellow / YouTube / Repeat
 Mode	 Picture / Format	 Blue / Teletext	 Blue / Prime Video / Random
 PRE	 Back / Return	 Blue / Teletext	 Text / Goto

Original	Substitut	Original	Substitut
