



 







 

 


 



 

 










Original	Substitut
 Power	 Power
 Mute	 Mute / Dimmer
 I-II	 Audio / Lang I/II
 Scale	 Smart / List
 Sleep	 Sleep / Timer
 Display	 Display / Media
 Text	 Text / Goto
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Jump	 Back / Return

Original	Substitut
 0	 0
 ENT	 Fav / Marker / PC
 Vol+	 Vol+
 TV	 TV/Radio /
 TV	 Shift + 1
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Input	 AV / Input / RDS
 CH-	 CH- / Page-
 Exit	 Exit / Cancel / Clear
 Up	 Up
 Menu	 Menu / Home
 Left	 Left
 OK	 OK
 Right	 Right
 S.Mode	 Sound / Title
 Down	 Down





	Original	Substitut	
	P.Mode	Picture / Format	
	Red	Red / Netflix / Search	
	Green	Green / APP / Repeat	
	Yellow	Yellow / YouTube / Repeat	
	Blue	Blue / Prime Video / Random	
	Text Index	Info / Angle	
	Text Reveal	Subtitle / EQ	
	Text Size	Zoom / Size	
	Text Hold	Stop / Hold	

	Original	Substitut	

