



















 



 








 
 



 










 










Original	Substitut
 Power	 Power
 Power Tv	 +  Shift + Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Txt	 Text / Goto
 0	 0
 [<>]/4:3/16:9	 Picture / Format
 TV	 Subtitle / EQ
 Radio	 TV/Radio /
 Up	 Up

Original	Substitut
 Help	 Guide / EPG / -/--
 Left	 Left
 OK	 OK
 Right	 Right
 Music	 Audio / Lang I/II
 Down	 Down
 WWW	 Display / Media
 Video	 +  Shift + 4
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Vol+	 Vol+
 Vol+ Tv	 +  Shift + Vol+
 M	 Menu / Home
 Prog+	 CH+ / Page+
 Vol-	 Vol-





Original	Substitut	
	Vol- Tv	+ Shift + Vol-
	Back	Back / Return
	Prog-	CH- / Page-
	Mute	Mute / Dimmer
	Mute Tv	+ Shift + Mute / Dimmer
	Play	Play / Slow
	Pause	Pause / Step / Freeze
	Stop	Stop / Hold
	Buy	Fav / Marker / PC
	I<<	I<< / Preset-
	<<	<< / Tune-
	>>	>> / Tune+
	>>I	>>I / Preset+

Original	Substitut

