








Original	Substitut	Original	Substitut
	Power		Power
	Mute		Mute / Dimmer
	Play		Play / Slow
	Pause/Subpage		Pause / Step / Freeze
	Stop/Hold		Stop / Hold
	Rec		Rec / Rec Mode
	<</Index		<< / Tune-
	>>/Size		>> / Tune+
	I<</Mix		I<< / Preset-
	>>I/Timeshift		>>I / Preset+
	→ISl←		Audio / Lang I/II
	Subtitle		Subtitle / EQ
	→IPI←		Picture / Format
	Sleep		Sleep / Timer
	TXT		Text / Goto
	Input		AV / Input / RDS
	Menu		Menu / Home

Original	Substitut	Original	Substitut
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Exit		Exit / Cancel / Clear
	Down		Down
	Recall		Fav / Marker / PC
	Vol+		Vol+
	CH+		CH+ / Page+
	Vol-		Vol-
	Disp		Display / Media
	CH-		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5





Original	Substitut	Original	Substitut
	6		6
	7		7
	8		8
	9		9
	EPG		Guide / EPG / -/--
	0		0
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue/Mouse		Blue / Prime Video / Random
	Home		Shift + Menu /
	WWW.		Shift + Display / Media

