











 

























	Original	Substitut
	Mute	 Mute / Dimmer
	Still	 Shift + Pause / Step /
	I/II	 Audio / Lang I/II
	Power	 Power
	Scan	 Smart / List
	Sleep	 Sleep / Timer
	PIP	 Picture / Format
	Display	 Display / Media
	1	 1
	2	 2
	3	 3
	4	 4
	5	 5
	6	 6
	7	 7
	8	 8
	9	 9

	Original	Substitut
	TV/AV	 AV / Input / RDS
	0	 0
	Swap	 Back / Return
	P.STD	 Setup / OPT /
	S.STD	 Sound / Title
	Up	 Up
	CH+	 CH+ / Page+
	Vol-	 Vol-
	Left	 Left
	Menu	 Menu / Home
	OK	 OK
	Right	 Right
	Vol+	 Vol+
	CH-	 CH- / Page-
	Down	 Down
	[=]	 Text / Goto
	[+]	 Subtitle / EQ





	Original	Substitut	Original	Substitut
	[/=]	PROGRAM TV/RADIO		TV/Radio /
	<</[...]	TUNE- TUNE-		<< / Tune-
	>>/[?]	TUNE+ TUNE+		>> / Tune+
	[X]	PC FAV MARKER		Fav / Marker / PC
	Red/↑	NETFLIX SEARCH		Red / Netflix / Search
	Green/←	APP REPEAT		Green / APP / Repeat
	Yellow/→	YouTube REPEAT A-B		Yellow / YouTube / Repeat
	Blue/Enter/H.Lock	Prime Video RANDOM		Blue / Prime Video / Random
	White/↓/CH.List	GUIDE EPG		Guide / EPG / -/--
	Pause/Timer	STEP-FREEZE STEP-FREEZE		Pause / Step / Freeze
	[◆]/Zoom	SIZE ZOOM		Zoom / Size
	Exit	CLEAR EXIT CANCEL		Exit / Cancel / Clear

