 

 


 

 


 



 

 

 

 

 





Original	Substitut
 Source	 AV / Input / RDS
 Power	 Power
 [V]	 Shift + Smart / List
 [<>]	 Picture / Format
 Subtitle	 Subtitle / EQ
 O)I/II	 Audio / Lang I/II
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Recall	 Back / Return
 0	 0

Original	Substitut
 List	 Smart / List
 Vol+	 Vol+
 [≡i]/[i+]	 Info / Angle
 P+	 CH+ / Page+
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 P-	 CH- / Page-
 Text	 Text / Goto
 Quick	 Display / Media
 Up	 Up
 Pause	 Pause / Step / Freeze
 Exit	 Exit / Cancel / Clear
 <<	 << / Tune-
 Left	 Left
 OK	 OK
 Play	 Play / Slow
 Right	 Right





	Original	Substitut	Original	Substitut
	>>	 >> / Tune+		
	Menu	 Menu / Home		
	Stop	 Stop / Hold		
	Down	 Down		
	Return	 Shift + Back / Return		
	Red	 Red / Netflix / Search		
	Green	 Green / APP / Repeat		
	Yellow	 Yellow / YouTube / Repeat		
	Blue	 Blue / Prime Video / Random		
	[≡?]	 Guide / EPG / -/--		
	<<	 << / Preset-		
	[≡◆]	 Zoom / Size		
	[≡+]	 Shift + Display / Media		
	>>	 >> / Preset+		
	[O]/[≡x]	 Setup / OPT /		

