



Original	Substitut	Original	Substitut
 Power	 Power	 Time	 Sleep / Timer
 Open/Close	 Eject / Surround	 Title	 Sound / Title
 OSD	 Display / Media	 Up	 Up
 1	 1	 Menu	 Menu / Home
 2	 2	 Left	 Left
 3	 3	 Enter	 OK
 Step	 Shift + Pause / Step /	 Right	 Right
 4	 4	 Setup	 Setup / OPT /
 5	 5	 Down	 Down
 6	 6	 Zoom	 Zoom / Size
 DVD/USB	 AV / Input / RDS	 I<<	 I<< / Preset-
 7	 7	 L/R	 Red / Netflix / Search
 8	 8	 N/P	 Blue / Prime Video / Random
 9	 9	 <<	 << / Tune-
 Mute	 Mute / Dimmer	 Vol-	 Vol-
 0/10	 0	 Vol+	 Vol+
 10+	 Guide / EPG / -/--	 >>I	 >>I / Preset+

Original	Substitut	Original	Substitut
 Power	 Mute / Dimmer	 SHIFT	
 TV	 DVD	 SAT	 AUX
 SLOW	 STEP-FREEZE	 HOLD	 REC MODE
 TUNE-	 TUNE+	 PRESET-	 PRESET+
 TITLE	 LANG VUI	 EQ	 SURROUND
 SOUND	 AUDIO	 SUBTITLE	 PROGRAM
 FORMAT	 SIZE	 TIMER	 TV RADIO
 PICTURE	 ZOOM	 SLEEP	 RDS
 TOP MENU	 OPT-TOOLS	 GOTO	 AV INPUT
 D.MENU	 SETUP	 TEXT	
 HOME	 ANGLE	 INFO	
 MENU	 OK	 RETURN	
 CLEAR	 EXIT	 CANCEL	 BACK
 VOL+	 SMART	 CH PAGE	
 VOL-	 MEDIA	 DISPLAY	
 TV	 DVD	 CD - BTB	
 1	 TAPE	 TUNER	
 4	 AUX - HDD	 USB	 BLUETOOTH
5	8	HDMI - BAT	FC
7	GUIDE EPG	0	FAV MARKER
NETFLIX	APP	YouTube	Prime Video
SEARCH	REPEAT	REPEAT A-B	RANDOM
www.mandis.tv			





Original		Substitut		Original		Substitut	
	Play		Play / Slow				
	Pause		Pause / Step / Freeze				
	Stop		Stop / Hold				
	>>		>> / Tune+				
	Video	+	Shift + 4				
	Prog		TV/Radio /				
	Clear		Exit / Cancel / Clear				
	A-B	/	Yellow / YouTube / Repeat				
	Repeat	/	Green / APP / Repeat				
	PBC		Text / Goto				
	Return		Back / Return				
	Slow	+	Shift + Play /				
	Language		Audio / Lang I/II				
	Subtitle		Subtitle / EQ				
	Angle		Info / Angle				
	Reset	+	Shift + Exit / Cancel / Clear				

