


















































 

 

 


 












Original	Substitut	Original	Substitut
	Power		Power
	Mute		Mute / Dimmer
	TV/RAD		TV/Radio /
	www		Sleep / Timer
	PIP		Zoom / Size
	Grid		D.Menu / Top
	Swap		Back / Return
	Sub ch		Setup / OPT /
	P/Pg+		CH+ / Page+
	RCL		Display / Media
	Vol+		Vol+
	P/Pg-		CH- / Page-
	i		Info / Angle
	Vol-		Vol-
	FAV		Fav / Marker / PC
	Check		Smart / List
	Message		Eject / Surround
	EPG		Guide / EPG / -/-
	Up		Up
	Menu		Menu / Home
	Left		Left
	OK		OK
	right		Right
	Exit		Exit / Cancel / Clear
	Down		Down
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	1		1
	2		2
	3		3
	4		4
	5		5





Original	Substitut
6 MNO 6	TUNER 6 6
7 PRS 7	AUX - HDD 7 7
8 TUV 8	USB 8 8
9 WXY 9	BLUETOOTH 9 9
Music Music	TITLE SOUND Sound / Title
0 /@- 0	HDMI - BAT 0 0
Photo Photo	FORMAT PICTURE Picture / Format
Rec Rec	REC MODE Rec / Rec Mode
<<< <<<	TUNE- <<< / Tune-
Play Play	SLOW Play / Slow
>>> >>>	TUNE+ >>> / Tune+
Recall Recall	RDS AV INPUT AV / Input / RDS
P/Pg >>>	PRESET+ >>> / Preset+
Stop/→ Stop/→	HOLD Stop / Hold
Pause Pause	STEP - FREEZE Pause / Step / Freeze
[]]] Shift + Zoom /	SHIFT + SIZE ZOOM Shift + Zoom /
[...] Subtitle / EQ	EQ SUBTITLE Subtitle / EQ

Original	Substitut
TXT Text / Goto	GOTO TEXT Text / Goto
Audio Audio / Lang I/II	LANG I/II AUDIO Audio / Lang I/II

