
 
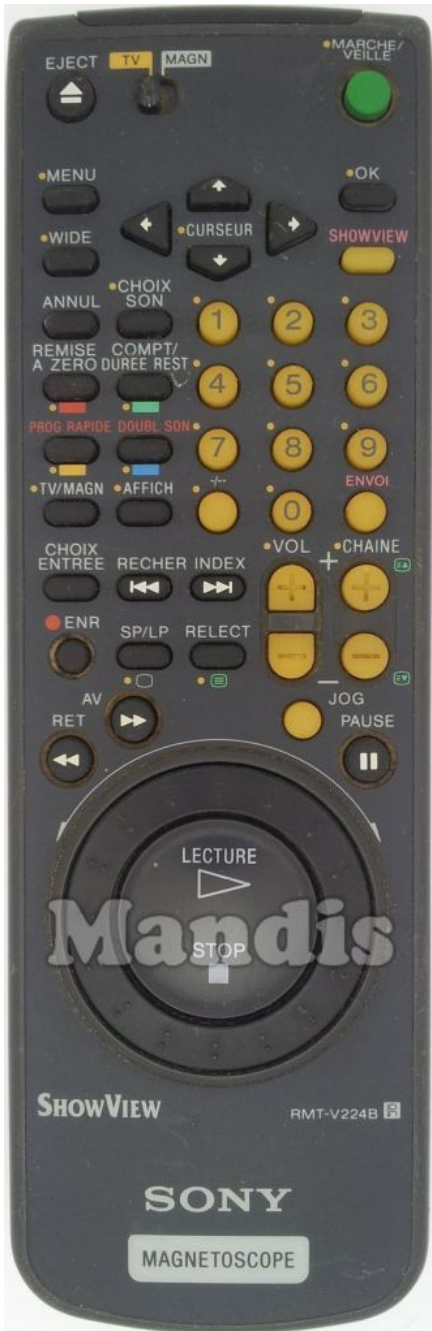 


Original	Substitut
 Marche/ Veil e	 Power
 Menu	 Menu / Home
 Up	 Up
 OK	 OK
 W de	 Zoom / Si ze
 Lef t	 Lef t
 Ri ght	 Ri ght
 Down	 Down
 Choi x Son	 Sound / Ti tle
 1	 1
 2	 2
 3	 3
 Red	 Red / Netfli x / Search
 Green	 Green / APP / Repeat
 4	 4
 5	 5
 6	 6

Original	Substitut
 Yel l ow	 Yel l ow / YouT ube / Repeat
 Bl ue	 Bl ue / Pri me Vi deo / Random
 7	 7
 8	 8
 9	 9
 Tv/ M agn	 TV/ Radi o /
 Af fi ch	 I nf o / Angl e
 - / - -	 Gui de / EPG / - / - -
 0	 0
 Vol +	 Vol +
 Chai ne+	 CH+ / Page+
 []	 Pi ct ure / For mat
 [=]	 Text / Got o
 Vol -	 Vol -
 Chai ne-	 CH- / Page-





Original		Substitut		Original		Substitut	
	Eject		Eject / Surround		4		4
	Marche/ Veille		Power		5		5
	Menu		Menu / Home		6		6
	Up		Up		Prog Rapi de		D. Menu / Top
	OK		OK		Doubl . Son		Audi o / Lang I / II
	W de		Zoom / Si ze		7		7
	Lef t		Lef t		8		8
	Ri ght		Ri ght		9		9
	Showi ew		Smart / Li st		Tv/ Mogn		TV/ Radi o /
	Down		Down		Aff i ch		I nf o / Angl e
	Annul		Exi t / Cancel / Clear		- / - -		Gui de / EPG / - / - -
	Choi x Son		Sound / Ti tle		0		0
	1		1		Envoi		Fav / Marker / PC
	2		2		Choi x Entree		AV / Input / RDS
	3		3		I <<		I << / Preset -
	Remi se a Zero		Back / Ret urn		>>I		>>I / Preset +
	Compt / Dur ee		Di spl ay / Medi a		Vol +		Vol +





Original	Substitut	Original	Substitut
CHAINE +	Chai ne+	CH PAGE +	CH+ / Page+
	ENR		Rec / Rec Mòde
	SP/ LP		Pi ct ure / Format
	Rel ect		Text / Got o
	Vol -		Vol -
	Chai ne-		CH- / Page-
	<<		<< / Tune-
	>>		>> / Tune+
	J og		Set up / OPT /
	Pause		Pause / Step / Freeze
	Wheel Left		Shi ft + I << / Preset-
	Lect ure		Pl ay / Sl ow
	Wheel Ri ght		Shi ft + >> / Preset +
	St op		St op / Hol d

