



The image shows a black Mandis remote control. At the top, there is a red power button, a 'DIMMER MUTE' button, and a yellow 'SHIFT' button. Below these are four blue buttons: 'TV', 'DVD', 'SAT', and 'AUX'. The main body of the remote contains a grid of buttons for various functions: 'SLOW', 'STEP-FREEZE', 'HOLD', 'REC MODE', 'TUNE-', 'TUNE+', 'PRESET-', 'PRESET+', 'TITLE', 'LANG/VI', 'EQ', 'SURROUND', 'SOUND', 'AUDIO', 'SUBTITLE', 'FORMAT', 'SIZE', 'TIMER', 'PROGRAM', 'PICTURE', 'ZOOM', 'SLEEP', 'TV/RADIO', 'TOP MENU', 'OPT-TOOLS', 'GOTO', 'RDS', 'D.MENU', 'SETUP', 'TEXT', and 'AV INPUT'. In the center is a directional pad with 'OK' in the middle. To the left of the pad are 'CLEAR', 'EXIT', 'CANCEL', and a volume control section with '+' and '-' buttons and 'VOL' text. To the right are 'RETURN', 'BACK', 'LIST', 'SMART', 'MEDIA', 'DISPLAY', and a channel/page control section with '+' and '-' buttons and 'CH PAGE' text. Below the directional pad is a numeric keypad (0-9) with additional labels: 'TV' for 1, 'DVD' for 2, 'CD-STS' for 3, 'VIDEO' for 4, 'TAPE' for 5, 'TUNER' for 6, 'AUX-HDD' for 7, 'USB' for 8, 'BLUETOOTH' for 9, 'HDMI-SAT' for 0, and 'PC' for the 'F' key. At the bottom, there are four colored buttons: 'NETFLIX' (red), 'APP' (green), 'YouTube' (yellow), and 'Prime Video' (blue). Below these are four labels: 'SEARCH', 'REPEAT', 'REPEAT A-B', and 'RANDOM'. The 'Mandis shop' logo and website 'www.mandis.tv' are at the very bottom.