



Original	Substitut	Original	Substitut
	Power		Power
	Source		AV / Input / RDS
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	Home		Shift + Menu /
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Q.View		Setup / OPT /
	0		0
	Info		Info / Angle

Original	Substitut	Original	Substitut
	Menu		Menu / Home
	Up		Up
	Guide		Guide / EPG / -/--
	Left		Left
	OK		OK
	Right		Right
	Back		Back / Return
	Down		Down
	Exit		Exit / Cancel / Clear
	Vol+		Vol+
	APP Store		Display / Media
	CH+		CH+ / Page+
	Vol-		Vol-
	Mute		Mute / Dimmer
	CH-		CH- / Page-
	Tool		TV/Radio /
	FAV		Fav / Marker / PC





Original	Substitut
 APP	 Shift + Green / APP /
 CH.List	 Smart / List
 <<	 << / Tune-
 Play	 Play / Slow
 >>	 >> / Tune+
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze
 Rec	 Rec / Rec Mode
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random

Original	Substitut

