

Original	Substitut	Original	Substitut
Power ON/Off		Power	
CD Play		Play / Slow	
CD Pause		Pause / Step / Freeze	
Stop		Stop / Hold	
CD Rewind		<< / Tune-	
CD F.FWD		>> / Tune+	
Prev./Prog-		I<< / Preset-	
Next/Prog+		>>I / Preset+	
Tape 2 Pre./eq		Subtitle / EQ	
Tape 1 Hall/Ats		Eject / Surround	
Sleep		Sleep / Timer	
Program		TV/Radio /	
CD/Theater		Setup / OPT /	
Input/Source		AV / Input / RDS	
Mode		Menu / Home	
Tape 1 Preset		Up	
Preset Pause		OK	
Woofer/Speed		Right	
Volume+		Vol+	
Funct./Direct		Smart / List	
Vol Rs+/S.Mode		CH+ / Page+	
Volume-		Vol-	
Display		Display / Media	
Vol Rs-/Effect		CH- / Page-	
Pr 1		1	
Pr 2		2	
Pr 3		3	
Pr 4		4	
Pr 5		5	
Pr 6		6	
Repeat		Green / APP / Repeat	
CD Random		Blue / Prime Video / Random	
Tape 1 Play		Shift + Play /	
Tape 1 Stop		Shift + Stop /	

Hold



Power **DIMMER MUTE** **SHIFT**

TV **DVD** **SAT** **AUX**

SLOW **STEP-FREEZE** **HOLD** **REC MODE**

Play **Pause** **Stop** **Red**

TUNE- **TUNE+** **PRESET-** **PRESET+**

Left Arrow **Right Arrow** **Double Left Arrow** **Double Right Arrow**

TITLE **LANG/VI** **EQ** **SURROUND**

SOUND **AUDIO** **SUBTITLE** **Up Arrow**

FORMAT **SIZE** **TIMER** **PROGRAM**

PICTURE **ZOOM** **SLEEP** **TV/RADIO**

TOP MENU **OPT-TOOLS** **GOTO** **RDS**

D.MENU **SETUP** **TEXT** **AV INPUT**

HOME **ANGLE**

MENU **INFO**

Left Arrow **OK** **Right Arrow**

Up Arrow **Down Arrow**

CLEAR **RETURN**

EXIT **BACK**

CANCEL **LIST**

+ **SMART** **+**

VOL **MEDIA** **CH PAGE**

- **DISPLAY** **-**

TV **DVD** **CD-STB**

1 **2** **3**

VIDEO **TAPE** **TUNER**

4 **5** **6**

AUX-HDD **USB** **BLUETOOTH**

7 **8** **9**

Left Arrow **HDMI-SAT** **PC**

GUIDE **0** **FAV MARKER**

EPG

NETFLIX **APP** **YouTube** **Prime Video**

SEARCH **REPEAT** **REPEAT A-B** **RANDOM**

Mandis

shop

www.mandis.tv