

Original	Substitut	Original	Substitut
On/Off	 Power	Chan.Down	 CH- / Page-
Mute	 Mute / Dimmer	1	 1
Menu audio	 Audio / Lang I/II	2	 2
Sleep Timer	 Sleep / Timer	3	 3
Return TV	 TV/Radio /	4	 4
Text	 Text / Goto	5	 5
TV/AV	 AV / Input / RDS	6	 6
Menu	 Menu / Home	7	 7
Menu Up	 Up	8	 8
Camera	 Info / Angle	9	 9
Menu Left	 Left	Guide -/-- 1.	 Guide / EPG / -/--
OK Enter	 OK	0/10	 0
Menu Right	 Right	2.Fav P/C 2.	 Fav / Marker / PC
Menu Down	 Down	Red	 Red / Netflix / Search
Volume+	 Vol+	Green	 Green / APP / Repeat
Chan.Up	 CH+ / Page+	Yellow	 Yellow / YouTube / Repeat
Volume-	 Vol-	Blue	 Blue / Prime Video / Random



The image shows a black Mandis remote control with a variety of buttons. At the top, there is a power button (red circle with a power symbol), a DIMMER MUTE button (black with white text), and a SHIFT button (yellow circle with black text). Below these are four blue buttons labeled TV, DVD, SAT, and AUX. The TV button has a SLOW label below it. The DVD button has STEP - FREEZE below it. The SAT button has HOLD below it. The AUX button has REC MODE below it. The next row contains: a play button (right arrow), a pause button (two vertical bars), a stop button (square), and a red emergency stop button (red circle with a dot). The following row has: TUNE- (left arrow), TUNE+ (right arrow), PRESET- (left arrow with a dot), and PRESET+ (right arrow with a dot). The next row contains: TITLE, LANG/VI, EQ, and SURROUND. The following row has: SOUND, AUDIO, SUBTITLE, and a button with an upward arrow. The next row contains: FORMAT, SIZE, TIMER, and PROGRAM. The following row has: PICTURE, ZOOM, SLEEP, and TV/ RADIO. The next row contains: TOP MENU, OPT-TOOLS, GOTO, and RDS. The following row has: D.MENU, SETUP, TEXT, and AV INPUT. Below this is a row with HOME and ANGLE. The next row contains a MENU button, a directional pad with an OK button in the center, and an INFO button. The directional pad has four blue buttons with arrows pointing up, down, left, and right. Below the directional pad is a row with CLEAR, EXIT, and RETURN. The next row contains CANCEL, LIST, and BACK. The following row has a large + VOL button, a SMART button, a MEDIA button, a DISPLAY button, and a large + CH PAGE button. The next row contains TV, DVD, and CD - STB. The following row has a numeric keypad with buttons 1 through 9 and 0. The next row contains VIDEO, TAPE, and TUNER. The following row has AUX - HDD, USB, and BLUETOOTH. The next row contains a button with a double arrow, HDMI - SAT, and PC. The following row has GUIDE EPG, a button with a double arrow, and FAV MARKER. At the bottom, there is a row with four colored buttons: Netflix (red), App (green), YouTube (yellow), and Prime Video (blue). Below these are four buttons: SEARCH, REPEAT, REPEAT A-B, and RANDOM. At the very bottom, there is a logo for Mandis shop and the website address www.mandis.tv.

Original	Substitut	Original	Substitut
On/Off	 Power	Info	 Info / Angle
Mute	 Mute / Dimmer	Menu Left	 Left
Update	 Play / Slow	OK Enter	 OK
Reveal	 Pause / Step / Freeze	Menu Right	 Right
Txt Stop	 Stop / Hold	Menu Off	 Exit / Cancel / Clear
Menu audio	 Audio / Lang I/II	Menu Down	 Down
Subt.List	 Subtitle / EQ	Back	 Back / Return
Surround	 Eject / Surround	Volume+	 Vol+
4.# 16:9	 Picture / Format	Browse	 Smart / List
Txt Expand	 Zoom / Size	Chan.Up	 CH+ / Page+
Sleep Timer	 Sleep / Timer	Volume-	 Vol-
Return TV	 TV/Radio /	Display	 Display / Media
Menu video	 D.Menu / Top	Chan.Down	 CH- / Page-
Text	 Text / Goto	1	 1
TV/AV	 AV / Input / RDS	2	 2
Menu	 Menu / Home	3	 3
Menu Up	 Up	4	 4



Original	Substitut		Original	Substitut
5		5		
6		6		
7		7		
8		8		
9		9		
Guide -/-- 1.		Guide / EPG / -/--		
0/10		0		
2.Fav P/C 2.		Fav / Marker / PC		
Red		Red / Netflix / Search		
Green		Green / APP / Repeat		
Yellow		Yellow / YouTube / Repeat		
Blue		Blue / Prime Video / Random		
Nicam/Mono	 + 	Shift + Audio / Lang I/II		
Mix Scan	 + 	Shift + Text /		
Level L	 + 	Shift + Left		
Level R/Woofers	 + 	Shift + Right		
3.*	 + 	Shift + 3		

