

Original	Substitut	
On/Off		Power
Mute		Mute / Dimmer
Menu audio		Audio / Lang I/II
Sleep Timer		Sleep / Timer
Return TV		TV/Radio /
Text		Text / Goto
TV/AV		AV / Input / RDS
Menu		Menu / Home
Menu Up		Up
Camera		Info / Angle
Menu Left		Left
OK Enter		OK
Menu Right		Right
Menu Down		Down
Volume+		Vol+
Chan.Up		CH+ / Page+
Volume-		Vol-

Original	Substitut	
Chan.Down		CH- / Page-
1		1
2		2
3		3
4		4
5		5
6		6
7		7
8		8
9		9
Guide -/-- 1.		Guide / EPG / -/--
0/10		0
2.Fav P/C 2.		Fav / Marker / PC
Red		Red / Netflix / Search
Green		Green / APP / Repeat
Yellow		Yellow / YouTube / Repeat
Blue		Blue / Prime Video / Random



The image shows a black remote control for a Mandis TV. The remote features a variety of buttons for controlling the television. At the top, there are buttons for Power (a red circle with a white power symbol), Dimmer Mute (a black circle with a white speaker icon and the text 'DIMMER MUTE'), and Shift (a yellow circle with the text 'SHIFT'). Below these are four blue buttons: TV, DVD, SAT, and AUX. The main section of the remote contains a grid of buttons for various functions: SLOW, STEP-FREEZE, HOLD, REC MODE, Play/Pause, Stop, Preset-, Preset+, Tune-, Tune+, Preset-, Preset+, Title, Lang III, EQ, Surround, Sound, Audio, Subtitle, Format, Size, Timer, Program, Picture, Zoom, Sleep, TV/Radio, Top Menu, Opt-Tools, Goto, RDS, D.Menu, Setup, Text, and AV Input. In the center is a directional pad with four blue arrow buttons (Up, Down, Left, Right) and a central 'OK' button. To the left of the pad are buttons for Clear, Exit, and Cancel. To the right are buttons for Return, Back, and Info. Below the directional pad are buttons for List, Smart, Media, and Display. Further down are buttons for TV, DVD, and CD-DB, each with a corresponding number (1, 2, 3). Below these are buttons for Video, Tape, and Tuner, each with a corresponding number (4, 5, 6). The next row has buttons for Aux-HDD, USB, and Bluetooth, each with a corresponding number (7, 8, 9). The bottom row of the main section has buttons for Guide EPG, HDMI-SAT, and PC, each with a corresponding number (0, 1, 2). At the very bottom, there are four colored buttons: Netflix (red), App (green), YouTube (yellow), and Prime Video (blue). Below these are four buttons: Search, Repeat, Repeat A-B, and Random. The Mandis logo is prominently displayed in the center of the bottom section, with the website address www.mandis.tv below it.

Power **DIMMER MUTE** **SHIFT**

TV **DVD** **SAT** **AUX**

SLOW **STEP-FREEZE** **HOLD** **REC MODE**

Play/Pause **Stop** **Presets** **Presets**

Tune- **Tune+** **Presets** **Presets**

Left Arrow **Right Arrow** **EQ** **SURROUND**

Sound **AUDIO** **SUBTITLE** **Up Arrow**

Format **Size** **TIMER** **PROGRAM**

Picture **Zoom** **SLEEP** **TV/RADIO**

TOP MENU **OPT-TOOLS** **GOTO** **RDS**

D.MENU **SETUP** **TEXT** **AV INPUT**

HOME **ANGLE**

MENU **Up Arrow** **OK** **Down Arrow** **Info**

Left Arrow **Right Arrow**

CLEAR **RETURN**

EXIT **BACK**

CANCEL **LIST** **+**

VOL **SMART** **CH**

- **MEDIA** **PAGE**

DISPLAY **-**

TV **DVD** **CD-DB**

1 **2** **3**

VIDEO **TAPE** **TUNER**

4 **5** **6**

AUX-HDD **USB** **BLUETOOTH**

7 **8** **9**

Guide EPG **HDMI-SAT** **PC**

0 **FAV MARKER**

NETFLIX **APP** **YouTube** **Prime Video**

SEARCH **REPEAT** **REPEAT A-B** **RANDOM**

Mandis
shop

www.mandis.tv

Original	Substitut
On/Off	 Power
Mute	 Mute / Dimmer
Update	 Play / Slow
Reveal	 Pause / Step / Freeze
Txt Stop	 Stop / Hold
Menu audio	 Audio / Lang I/II
Subt.List	 Subtitle / EQ
Surround	 Eject / Surround
4.# 16:9	 Picture / Format
Txt Expand	 Zoom / Size
Sleep Timer	 Sleep / Timer
Return TV	 TV/Radio /
Menu video	 D.Menu / Top
Text	 Text / Goto
TV/AV	 AV / Input / RDS
Menu	 Menu / Home
Menu Up	 Up

Original	Substitut
Info	 Info / Angle
Menu Left	 Left
OK Enter	 OK
Menu Right	 Right
Menu Off	 Exit / Cancel / Clear
Menu Down	 Down
Back	 Back / Return
Volume+	 Vol+
Browse	 Smart / List
Chan.Up	 CH+ / Page+
Volume-	 Vol-
Display	 Display / Media
Chan.Down	 CH- / Page-
1	 1
2	 2
3	 3
4	 4



Original	Substitut		Original	Substitut
5		5		
6		6		
7		7		
8		8		
9		9		
Guide -/-- 1.		Guide / EPG / -/--		
0/10		0		
2.Fav P/C 2.		Fav / Marker / PC		
Red		Red / Netflix / Search		
Green		Green / APP / Repeat		
Yellow		Yellow / YouTube / Repeat		
Blue		Blue / Prime Video / Random		
Nicam/Mono		Shift + Audio / Lang I/II		
Mix Scan		Shift + Text /		
Level L		Shift + Left		
Level R/Woofer		Shift + Right		
3.*		Shift + 3		

