

Original	Substitut	Original	Substitut
On/Off	 Power	Chan.Down	 CH- / Page-
Mute	 Mute / Dimmer	1	 1
Menu audio	 Audio / Lang I/II	2	 2
Sleep Timer	 Sleep / Timer	3	 3
Return TV	 TV/Radio /	4	 4
Text	 Text / Goto	5	 5
TV/AV	 AV / Input / RDS	6	 6
Menu	 Menu / Home	7	 7
Menu Up	 Up	8	 8
Camera	 Info / Angle	9	 9
Menu Left	 Left	Guide -/-- 1.	 Guide / EPG / -/--
OK Enter	 OK	0/10	 0
Menu Right	 Right	2.Fav P/C 2.	 Fav / Marker / PC
Menu Down	 Down	Red	 Red / Netflix / Search
Volume+	 Vol+	Green	 Green / APP / Repeat
Chan.Up	 CH+ / Page+	Yellow	 Yellow / YouTube / Repeat
Volume-	 Vol-	Blue	 Blue / Prime Video / Random



The image shows a black remote control for a Mandis TV. At the top, there are three buttons: a red power button, a black 'DIMMER MUTE' button, and a yellow 'SHIFT' button. Below these are four blue buttons: 'TV', 'DVD', 'SAT', and 'AUX'. The next row contains 'SLOW', 'STEP - FREEZE', 'HOLD', and 'REC MODE'. The following row has 'TUNE-' (left arrow), 'TUNE+' (right arrow), 'PRESET-' (left double arrow), and 'PRESET+' (right double arrow). The next row includes 'TITLE', 'LANG III', 'EQ', and 'SURROUND'. The following row has 'SOUND', 'AUDIO', 'SUBTITLE', and an up arrow. The next row includes 'FORMAT', 'SIZE', 'TIMER', and 'PROGRAM'. The following row has 'PICTURE', 'ZOOM', 'SLEEP', and 'TV / RADIO'. The next row includes 'TOP MENU', 'OPT-TOOLS', 'GOTO', and 'RDS'. The final row in this section has 'D.MENU', 'SETUP', 'TEXT', and 'AV INPUT'. Below these are 'HOME' and 'ANGLE' buttons. The next row has 'MENU' and 'INFO'. The center features a directional pad with 'OK' in the middle. The following row has 'CLEAR', 'EXIT', 'CANCEL', 'LIST', 'SMART', 'MEDIA', 'DISPLAY', 'RETURN', and 'BACK'. The next row has 'TV', 'DVD', and 'CD - STB'. The following row has '1', '2', '3', '4', '5', '6', '7', '8', '9', and '0'. The next row has 'VIDEO', 'TAPE', 'TUNER', 'AUX - HDD', 'USB', 'BLUETOOTH', 'HDMI - SAT', and 'PC'. The final row has 'GUIDE EPG', 'FAV MARKER', and 'PRIME VIDEO'. At the bottom, there are four buttons: 'NETFLIX', 'APP', 'YouTube', and 'Prime Video'. Below these are four buttons: 'SEARCH', 'REPEAT', 'REPEAT A-B', and 'RANDOM'. The Mandis logo and website address 'www.mandis.tv' are at the very bottom.

Power **DIMMER MUTE** **SHIFT**

TV **DVD** **SAT** **AUX**

SLOW **STEP - FREEZE** **HOLD** **REC MODE**

TUNE- **TUNE+** **PRESET-** **PRESET+**

TITLE **LANG III** **EQ** **SURROUND**

SOUND **AUDIO** **SUBTITLE** **▲**

FORMAT **SIZE** **TIMER** **PROGRAM**

PICTURE **ZOOM** **SLEEP** **TV / RADIO**

TOP MENU **OPT-TOOLS** **GOTO** **RDS**

D.MENU **SETUP** **TEXT** **AV INPUT**

HOME **ANGLE**

MENU **INFO**

OK

CLEAR **EXIT** **CANCEL** **LIST** **SMART** **MEDIA** **DISPLAY** **RETURN** **BACK**

TV **DVD** **CD - STB**

1 **2** **3**

4 **5** **6**

7 **8** **9**

0

VIDEO **TAPE** **TUNER** **AUX - HDD** **USB** **BLUETOOTH** **HDMI - SAT** **PC**

GUIDE EPG **FAV MARKER** **PRIME VIDEO**

NETFLIX **APP** **YouTube** **Prime Video**

SEARCH **REPEAT** **REPEAT A-B** **RANDOM**

Mandis
shop
www.mandis.tv

Original	Substitut	Original	Substitut
On/Off	 Power	Info	 Info / Angle
Mute	 Mute / Dimmer	Menu Left	 Left
Update	 Play / Slow	OK Enter	 OK
Reveal	 Pause / Step / Freeze	Menu Right	 Right
Txt Stop	 Stop / Hold	Menu Off	 Exit / Cancel / Clear
Menu audio	 Audio / Lang I/II	Menu Down	 Down
Subt.List	 Subtitle / EQ	Back	 Back / Return
Surround	 Eject / Surround	Volume+	 Vol+
4.# 16:9	 Picture / Format	Browse	 Smart / List
Txt Expand	 Zoom / Size	Chan.Up	 CH+ / Page+
Sleep Timer	 Sleep / Timer	Volume-	 Vol-
Return TV	 TV/Radio /	Display	 Display / Media
Menu video	 D.Menu / Top	Chan.Down	 CH- / Page-
Text	 Text / Goto	1	 1
TV/AV	 AV / Input / RDS	2	 2
Menu	 Menu / Home	3	 3
Menu Up	 Up	4	 4



Original	Substitut		Original	Substitut
5		5		
6		6		
7		7		
8		8		
9		9		
Guide -/-- 1.		Guide / EPG / -/--		
0/10		0		
2.Fav P/C 2.		Fav / Marker / PC		
Red		Red / Netflix / Search		
Green		Green / APP / Repeat		
Yellow		Yellow / YouTube / Repeat		
Blue		Blue / Prime Video / Random		
Nicam/Mono		+  Shift + Audio / Lang I/II		
Mix Scan		+  Shift + Text /		
Level L		+  Shift + Left		
Level R/Woofer		+  Shift + Right		
3.*		+  Shift + 3		

