

Original	Substitut	Original	Substitut
On/Off	 Power	Auto/Track	 Setup / OPT /
Play	 Play / Slow	Rec/Mode	 Text / Goto
Pause	 Pause / Step / Freeze	Input Source	 AV / Input / RDS
Stop	 Stop / Hold	Menu	 Menu / Home
Record	 Rec / Rec Mode	Menu Up	 Up
Rewind	 << / Tune-	Menu Left	 Left
F.Forward	 >> / Tune+	OK Enter	 OK
Prev.	 I<< / Preset-	Menu Right	 Right
Next	 >>I / Preset+	Exit	 Exit / Cancel / Clear
Audio Dub	 Sound / Title	Menu Down	 Down
Audio	 Audio / Lang I/II	VCR/TV	 Smart / List
Encode	 Subtitle / EQ	P.Back/R.+Play	 CH+ / Page+
Timer/Record	 Eject / Surround	Show View	 Display / Media
F.Adv	 Picture / Format	X2 Rew/Play	 CH- / Page-
T.Set/Clock	 Sleep / Timer	1	 1
Progr/C/CH	 TV/Radio /	2	 2
Count Remain	 D.Menu / Top	3	 3

Menu



Original	Substitut	Original	Substitut
4	 4		
5	 5		
6	 6		
7	 7		
8	 8		
9	 9		
Ch.Memo	 Guide / EPG / -/--		
0	 0		
Counter Clock	 Fav / Marker / PC		
Search Index	 Red / Netflix / Search		
Counter Stop	 Green / APP / Repeat		
Counter/Memor	 Yellow / YouTube / Repeat		
Counter Reset	 Blue / Prime Video / Random		
Slow Down	 +  Shift + Play /		
Clear 00:00	 +  Shift + Exit / Cancel / Clear		

