

Original	Substitut	Original	Substitut
On/Off	 Power	Menu Up	 Up
Audio Off	 Mute / Dimmer	Info	 Info / Angle
Play	 Play / Slow	Menu Left	 Left
Pause	 Pause / Step / Freeze	OK Enter	 OK
Stop	 Stop / Hold	Menu Right	 Right
Record	 Rec / Rec Mode	Menu Down	 Down
Rewind	 << / Tune-	Return	 Back / Return
F.Forward	 >> / Tune+	Volume+	 Vol+
Prev.	 I<< / Preset-	Auto/Track	 Smart / List
Next	 >>I / Preset+	Volume-	 Vol-
Title	 Sound / Title	DVD/TV	 Display / Media
Subt.	 Subtitle / EQ	1	 1
Zoom	 Zoom / Size	2	 2
Progr.	 TV/Radio /	3	 3
Top Menu	 D.Menu / Top	4	 4
C/CH	 Setup / OPT /	5	 5
Menu	 Menu / Home	6	 6



[illegible]