

Original	Substitut	Original	Substitut
On/Off	 Power	Info	 Info / Angle
Mute	 Mute / Dimmer	Menu Left	 Left
Update	 Play / Slow	OK Enter	 OK
Reveal	 Pause / Step / Freeze	Menu Right	 Right
Txt Stop	 Stop / Hold	Menu Off	 Exit / Cancel / Clear
Tone-	 << / Tune-	Menu Down	 Down
Menu audio	 Audio / Lang I/II	Back	 Back / Return
Subt.List	 Subtitle / EQ	Volume+	 Vol+
Surround	 Eject / Surround	Chan.Up	 CH+ / Page+
Txt Expand	 Zoom / Size	Volume-	 Vol-
Sleep Timer	 Sleep / Timer	Display	 Display / Media
Return TV	 TV/Radio /	Chan.Down	 CH- / Page-
Menu video	 D.Menu / Top	1	 1
Text	 Text / Goto	2	 2
TV/AV	 AV / Input / RDS	3	 3
Menu	 Menu / Home	4	 4
Menu Up	 Up	5	 5



Original	Substitut		Original	Substitut
6		6		
7		7		
8		8		
9		9		
Guide -/-- 1.		Guide / EPG / -/--		
0/10		0		
2.Fav P/C 2.		Fav / Marker / PC		
Red		Red / Netflix / Search		
Green		Green / APP / Repeat		
Yellow		Yellow / YouTube / Repeat		
Blue		Blue / Prime Video / Random		
Nicam/Mono	 + 	Shift + Audio / Lang I/II		
Level L	 + 	Shift + Left		
Level R/Woofer	 + 	Shift + Right		

