

Original	Substitut	Original	Substitut
On/Off	 Power	Video/Go-To	 Text / Goto
Audio Out	 Mute / Dimmer	Input Source	 AV / Input / RDS
Play	 Play / Slow	Menu	 Menu / Home
Pause	 Pause / Step / Freeze	Menu Up	 Up
Stop	 Stop / Hold	Info/Intro	 Info / Angle
Record	 Rec / Rec Mode	Menu Left	 Left
Rewind	 << / Tune-	OK Enter	 OK
F.Forward	 >> / Tune+	Menu Right	 Right
Prev.	 I<< / Preset-	Exit	 Exit / Cancel / Clear
Next	 >>I / Preset+	Menu Down	 Down
Audio Dub	 Sound / Title	Slow/Dpss+	 Vol+
Audio	 Audio / Lang I/II	VCR/TV	 Smart / List
Case Tape	 Picture / Format	Tracking+	 CH+ / Page+
Timer/Sleep	 Sleep / Timer	Slow/Dpss-	 Vol-
Progr/C/CH	 TV/Radio /	Display	 Display / Media
Mon/TV	 D.Menu / Top	Tracking-	 CH- / Page-
T.Set/Clock	 Setup / OPT /	1	 1



Original	Substitut	
2		2
3		3
4		4
5		5
6		6
7		7
8		8
9		9
-/--		Guide / EPG / -/--
0		0
Vps/Pdc		Fav / Marker / PC
Skip/Search		Red / Netflix / Search
Repeat		Green / APP / Repeat
Sp/Lp/Speed		Yellow / YouTube / Repeat
F.Adv		Blue / Prime Video / Random
On/Off	 + 	Shift + Power
Slow Down	 + 	Shift + Play /

Slow

Original	Substitut	
X2 Rew/Play	 + 	Shift + << /
Timer/Record	 + 	Shift + Sleep / Timer
Frame Up	 + 	Shift + Up
Frame Down	 + 	Shift + Down
Auto/Track	 + 	Shift + Smart / List
Search Index	 + 	Shift + Red / Netflix /
Counter Clock	 + 	Shift + Green / APP /
Counter/Memor	 + 	Shift + Yellow / YouTube /
Counter Reset	 + 	Shift + Blue / Prime

