




 
 



 

 

 


 

 









 






 

 



 







 



 







Original	Substitut	Original	Substitut
 Power	 Power	 0	 0
 Sleep	 Sleep / Timer	 Back	 Back / Return
 Mute	 Mute / Dimmer	 Menu	 Menu / Home
 Source	 AV / Input / RDS	 CH-	 CH- / Page-
 1	 1	 Up	 Up
 2	 2	 CH+	 CH+ / Page+
 3	 3	 Left	 Left
 Audio/Lang	 Audio / Lang I/II	 Enter	 OK
 4	 4	 Right	 Right
 5	 5	 Vol-	 Vol-
 6	 6	 Down	 Down
 Tv/Radio	 TV/Radio /	 Vol+	 Vol+
 7	 7	 Setup	 Setup / OPT /
 8	 8	 Play/Timeshift	 Play / Slow
 9	 9	 Pause	 Pause / Step / Freeze
 Exit	 Exit / Cancel / Clear	 Stop	 Stop / Hold
 CH.List	 Smart / List	 Eject	 Eject / Surround

Original	Substitut	Original	Substitut
 0	 0	 TV	 DVD
 Back	 Back / Return	 SAT	 AUX
 Menu	 Menu / Home	 SLOW	 STEP - FREEZE
 CH-	 CH- / Page-	 HOLD	 REC MODE
 Up	 Up	 PRESET+	 PRESET-
 CH+	 CH+ / Page+	 TUNE-	 TUNE+
 Left	 Left	 EQ	 SURROUND
 Enter	 OK	 TITLE	 LANG I/II
 Right	 Right	 SUBTITLE	 PROGRAM
 Vol-	 Vol-	 SOUND	 AUDIO
 Down	 Down	 PICTURE	 ZOOM
 Vol+	 Vol+	 FORMAT	 SIZE
 Setup	 Setup / OPT /	 TIMER	 TV RADIO
 Play/Timeshift	 Play / Slow	 SLEEP	 RDS
 Pause	 Pause / Step / Freeze	 TOP MENU	 D.MENU
 Stop	 Stop / Hold	 SETUP	 TEXT
 Eject	 Eject / Surround	 HOME	 ANGLE





Original	Substitut	Original	Substitut
Rec	Rec / Rec Mode	Yellow/A-B	Yellow / YouTube / Repeat
Text	Text / Goto	Blue/Repeat	Blue / Prime Video / Random
<<	<< / Tune-		
>>/Reveal	>> / Tune+		
I<</Hold	I<< / Preset-		
>>I/Sub.P	>>I / Preset+		
SUB.T	Subtitle / EQ		
Index/Title	Shift + Sound / Title		
Size/Zoom	Zoom / Size		
D.Menu	D.Menu / Top		
EPG	Guide / EPG / -/--		
FAV/Prog	Fav / Marker / PC		
P.Mode/Lang	Picture / Format		
S.Mode/Search	Sound / Title		
Info/Display	Info / Angle		
Red/Angle	Red / Netflix / Search		
Green/Slow	Green / APP / Repeat		

Original	Substitut	Original	Substitut
Yellow/A-B	Yellow / YouTube / Repeat		
Blue/Repeat	Blue / Prime Video / Random		

