

 









 






Original	Substitut	Original	Substitut
 Source	 AV / Input / RDS	 P +	 CH+ / Page+
 Sleep	 Sleep / Timer	 Vol -	 Vol-
 Power	 Power	 Mute	 Mute / Dimmer
 1	 1	 P -	 CH- / Page-
 2	 2	 Up	 Up
 3	 3	 Left	 Left
 4	 4	 Enter	 OK
 5	 5	 Right	 Right
 6	 6	 Menu	 Menu / Home
 7	 7	 Down	 Down
 8	 8	 Exit	 Exit / Cancel / Clear
 9	 9	 Red	 Red / Netflix / Search
 Options	 Setup / OPT /	 Green	 Green / APP / Repeat
 0	 0	 Yellow	 Yellow / YouTube / Repeat
 Screens	 Display / Media	 Blue	 Blue / Prime Video / Random
 Vol +	 Vol+	 TTX	 Text / Goto
 Favourites	 Fav / Marker / PC	 Pause	 Pause / Step / Freeze

Original	Substitut	Original	Substitut
 Source	 AV / Input / RDS	 P +	 CH+ / Page+
 Sleep	 Sleep / Timer	 Vol -	 Vol-
 Power	 Power	 Mute	 Mute / Dimmer
 1	 1	 P -	 CH- / Page-
 2	 2	 Up	 Up
 3	 3	 Left	 Left
 4	 4	 Enter	 OK
 5	 5	 Right	 Right
 6	 6	 Menu	 Menu / Home
 7	 7	 Down	 Down
 8	 8	 Exit	 Exit / Cancel / Clear
 9	 9	 Red	 Red / Netflix / Search
 Options	 Setup / OPT /	 Green	 Green / APP / Repeat
 0	 0	 Yellow	 Yellow / YouTube / Repeat
 Screens	 Display / Media	 Blue	 Blue / Prime Video / Random
 Vol +	 Vol+	 TTX	 Text / Goto
 Favourites	 Fav / Marker / PC	 Pause	 Pause / Step / Freeze



