



 



 



 







 



 

 



 

 



 


 
 



 



 

 

 
 


 

 

 

 

 


 




Original	Substitut	Original	Substitut
 Standby	 Power	 Tv/Radio	 TV/Radio /
 Source	 AV / Input / RDS	 Vol+	 Vol+
 1	 1	 CH+	 CH+ / Page+
 2	 2	 Mute	 Mute / Dimmer
 3	 3	 Vol-	 Vol-
 4	 4	 CH-	 CH- / Page-
 5	 5	 Menu	 Menu / Home
 6	 6	 Exit	 Exit / Cancel / Clear
 7	 7		 Up
 8	 8		 Left
 9	 9	 Enter	 OK
 Display	 Display / Media		 Right
 0	 0		 Down
 Recall	 Back / Return	 TXT	 Text / Goto
 Home	 Shift + Menu /	 Play	 Play / Slow
 e	 D.Menu / Top	 Pause	 Pause / Step / Freeze
 Mouse	 Smart / List	 Stop	 Stop / Hold

Original	Substitut	Original	Substitut
 Tv/Radio	 TV/Radio /	 Vol+	 Vol+
 CH+	 CH+ / Page+	 Mute	 Mute / Dimmer
 Vol-	 Vol-	 CH-	 CH- / Page-
 Menu	 Menu / Home	 Exit	 Exit / Cancel / Clear
	 Up		 Left
 Enter	 OK		 Right
	 Down	 TXT	 Text / Goto
 Play	 Play / Slow	 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold		



