



Original	Substitut	Original	Substitut
	Mute		Mute / Dimmer
	ATV/DTV		Eject / Surround
	Power		Power
	1		1
	2		2
	3		3
	CH+		CH+ / Page+
	4		4
	5		5
	6		6
	CH-		CH- / Page-
	7		7
	8		8
	9		9
	Vol+		Vol+
	Guide		Guide / EPG / -/--
	0		0

Original	Substitut	Original	Substitut
	Sleep		Sleep / Timer
	Vol-		Vol-
	Text		Text / Goto
	Text Subpage		Setup / OPT /
	CH. List		Smart / List
	Subtitle		Subtitle / EQ
	I-II		Audio / Lang I/II
	P.Size		Zoom / Size
	P.Mode		Picture / Format
	Exit		Exit / Cancel / Clear
	Up		Up
	Menu		Menu / Home
	Left		Left
	OK		OK
	Right		Right
	Info		Info / Angle
	Down		Down





Original	Substitut
SOURCE	RDS AV INPUT AV / Input / RDS
Text Index	SHIFT + GOTO TEXT Shift + Text /
Text Reveal	TOP MENU D.MENU D.Menu / Top
Text Size	SHIFT + SIZE ZOOM Shift + Zoom /
Text Hold	STEP-FREEZE Pause / Step / Freeze
Red	NETFLIX SEARCH Red / Netflix / Search
Green	APP REPEAT Green / APP / Repeat
Yellow	YouTube REPEAT A-B Yellow / YouTube / Repeat
Blue	Prime Video RANDOM Blue / Prime Video / Random

Original	Substitut

