



Original	Substitut
Power	Power
Netflix	+ Shift + Red / Netflix /
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
TV	TV/Radio /
0	0
Recall	Fav / Marker / PC
Vol+	Vol+
Mute	Mute / Dimmer
PR+	CH+ / Page+

Original	Substitut
Vol-	Vol-
i	Info / Angle
PR-	CH- / Page-
Menu	Menu / Home
Up	Up
Q.Menu	D.Menu / Top
Left	Left
OK	OK
Right	Right
Back	Back / Return
Down	Down
EXit	Exit / Cancel / Clear
World	Smart / List
Camera/Music/Ph	Display / Media
Guide	Guide / EPG / -/--
*/o	Picture / Format
Games	AV / Input / RDS





Original		Substitut		Original		Substitut	
	[≡]/Text		Text / Goto				
	Red		Red / Netflix / Search				
	Green		Green / APP / Repeat				
	Yellow		Yellow / YouTube / Repeat				
	Blue		Blue / Prime Video / Random				
	Lang		Audio / Lang I/II				
	[≡]..		Subtitle / EQ				
	[-O-]		Zoom / Size				
	<<		<< / Tune-				
	Pause		Pause / Step / Freeze				
	>>		>> / Tune+				
	Rec		Rec / Rec Mode				
	Play		Play / Slow				
	Stop		Stop / Hold				

