

 
 


 
 
 

 
 





 




 
 
 

 
 
 




 


 

 
 

 




 

 





 


 




 

 






 


 

 

 


 

 






 
 


 
 


 
 


Original	Substitut	Original	Substitut
	Power		Power
	[i]/Info		Info
	Mute		Mute
	I-II		Dual
	OK/Select		Ok
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/-/+10	 + 	Shift + Guide
	Exit		Exit

Original	Substitut	Original	Substitut
	Menu		Menu
	Red/↑/Return		Red
	Green/↓/Subtitle		Green
	Yellow/Audio		Yellow
	Blue/Angle		Blue
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	P+		Ch +
	P-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Play		Play
	Pause		Pause
	Stop		Stop
	<<		<<

 





	Original	Substitut	Original	Substitut
	>>		>>	
	[TV]		TV/R	
	D-Menu		Smart	
	TV		Media	
	AV		AV	
	P<P		Pre Ch	
	PP		D. Menu	
	[≡]		Text	
	[≡o]		Subt	
	[≡+]		Format	
	[≡x]		3D	
	[≡◆]/Wide		Shift + Format	
	[≡?]		Options	
	[≡i]/Guide		Guide	
	[:::]/Subtitle		Back	





Original	Substitut	Original	Substitut
 Power	 Power	 Stop	 Stop
 1	 1	 Play	 Play
 2	 2	 Pause	 Pause
 3	 3	 D-Menu	 Smart
 4	 4	 <<	 <<
 5	 5	 >>	 >>
 6	 6	 <<	 <<
 7	 7	 >>	 >>
 8	 8	 Time	 Shift + AV
 9	 9	 Zoom	 Shift + Eject
 0	 0	 Program	 Sleep
 -/--/+10	 Guide	 Search Mode	 AV
 Exit	 Exit	 Repeat	 Text
 Red/↑/Return	 Red	 A-B	 Shift + Play
 Green/↓/Subtitle	 Green	 C	 Yellow
 Yellow/Audio	 Shift + Yellow	 Title	 Info
 Blue/Angle	 Blue	 Display	 Shift + Info

Original	Substitut	Original	Substitut
 Power	 Power	 Stop	 Stop
 1	 1	 Play	 Play
 2	 2	 Pause	 Pause
 3	 3	 D-Menu	 Smart
 4	 4	 <<	 <<
 5	 5	 >>	 >>
 6	 6	 <<	 <<
 7	 7	 >>	 >>
 8	 8	 Time	 Shift + AV
 9	 9	 Zoom	 Shift + Eject
 0	 0	 Program	 Sleep
 -/--/+10	 Guide	 Search Mode	 AV
 Exit	 Exit	 Repeat	 Text
 Red/↑/Return	 Red	 A-B	 Shift + Play
 Green/↓/Subtitle	 Green	 C	 Yellow
 Yellow/Audio	 Shift + Yellow	 Title	 Info
 Blue/Angle	 Blue	 Display	 Shift + Info



