



Original	Substitut	Original	Substitut
Power	Power	CH-	CH- / Page-
DTV/VCR	AV / Input / RDS	Down	Down
Mute	Mute / Dimmer	Favorite	Fav / Marker / PC
Info	Info / Angle	1	1
Play	Play / Slow	2	2
Pause	Pause / Step / Freeze	3	3
Menu	Menu / Home	Game	Display / Media
EPG	Guide / EPG / -/--	4	4
Exit	Exit / Cancel / Clear	5	5
Up	Up	6	6
CH+	CH+ / Page+	Recall	Back / Return
Left	Left	7	7
Vol-	Vol-	8	8
OK	OK	9	9
Right	Right	0	0
Vol+	Vol+	Tv/Radio	TV/Radio /
Rec List	Smart / List	Audio	Audio / Lang I/II

Original	Substitut	Original	Substitut
CH-	CH- / Page-	CH- / Page-	CH- / Page-
Down	Down	Down	Down
Favorite	Fav / Marker / PC	Favorite	Fav / Marker / PC
1	1	1	1
2	2	2	2
3	3	3	3
Game	Display / Media	Game	Display / Media
4	4	4	4
5	5	5	5
6	6	6	6
Recall	Back / Return	Recall	Back / Return
7	7	7	7
8	8	8	8
9	9	9	9
0	0	0	0
Tv/Radio	TV/Radio /	Tv/Radio	TV/Radio /
Audio	Audio / Lang I/II	Audio	Audio / Lang I/II





	Original	Substitut		Original	Substitut
	Subtitle	Subtitle / EQ			
	Text	Text / Goto			
	Red	Red / Netflix / Search			
	Green	Green / APP / Repeat			
	Yellow	Yellow / YouTube / Repeat			
	Blue	Blue / Prime Video / Random			
	Record	Rec / Rec Mode			
	Stop	Stop / Hold			
	<<	<< / Tune-			
	>>	>> / Tune+			

	Original	Substitut

