



 











 

 
 


 


 




 






 
 


 

 
 


 






 
 








 
 


 

 
 
 

 

 
 
 
 

 




 




	Original	Substitut		Original	Substitut
	Standby		Power		Left
	DTV/VCR		AV		Ok
	Rec List		List		Ch +
	Slow		Media		Ch -
	Play		Play		Vol +
	Pause		Pause		Vol -
	Stop		Stop		Options
	>>		>>		Back
	<<		<<		1
	Record		Rec		2
	Menu		Menu		3
	Exit		Exit		4
	EPG		Guide		5
	Favorite		Pre Ch		6
	Up		Up		7
	Down		Down		8
	Right		Right		9

	Original	Substitut		Original	Substitut
	Left		Left		AUX
	OK		Ok		SAT
	CH+		Ch +		PLAY MODE
	CH-		Ch -		REC MODE
	Vol+		Vol +		SOUND
	Vol-		Vol -		AD
	Goto		Options		SETTINGS
	Recall		Back		OPT
	1		1		3D
	2		2		AV
	3		3		MENU
	4		4		INFO
	5		5		OK
	6		6		BACK
	7		7		EXIT
	8		8		HOME
	9		9		SMART





Original		Substitut	
	0		0
	PVR Info		Format
	Info		Info
	Subtitle		Subt
	Text		Text
	Tv/Radio		TV/R
	Lang		Dual
	Audio	+	Shift + Dual
	Mute		Mute
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue

Original		Substitut	

